


DAIKIN

WIRED REMOTE CONTROLLER

INSTALLATION MANUAL

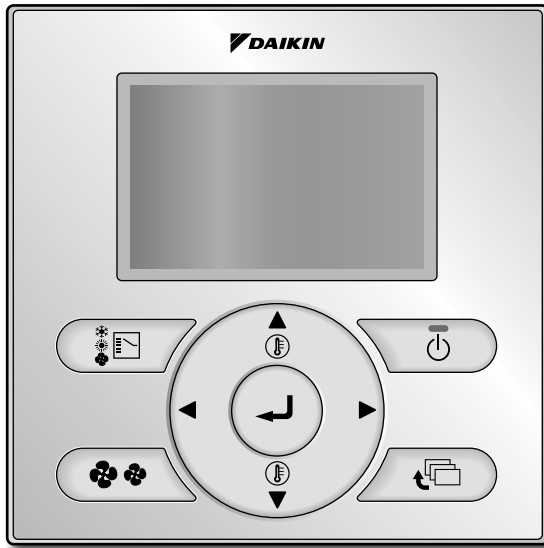

MODEL BRC1E51A7

**Be sure to read this installation manual before
conducting the installation of this product.**

Contents



| | |
|---|-----------|
| 1. Safety Precautions | 2 |
| 2. Accessories | 4 |
| 3. Remote controller installation procedure | 4 |
| 4. Functions and menu items of remote controller buttons | 10 |
| 5. Power-on | 12 |
| 6. Field setting method | 13 |
| 7. Test operation method (in the case of SkyAir) | 16 |
| 8. Checking procedure of error record | 19 |
| 9. Registration method of the service contract | 20 |
| 10. Confirmation of registered details | 21 |
| 11. Clock Setting | 22 |
| 12. Language changeover | 22 |

1. Safety Precautions


■ Also see installation manual attached to the indoor unit.

Please read these "Safety Precautions" carefully before installing air conditioning equipment and be sure to install it correctly.

- The precautions described herein are classified as WARNING and CAUTION. They both contain important information regarding safety. Be sure to observe all precautions without fail.

| | |
|---|---|
|  WARNING | Failure to follow these instructions properly may result in personal injury or loss of life. |
|  CAUTION | Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances. |

- After completing installation, conduct a trial operation to check for faults and explain to the customer how to operate the air conditioner and take care of it with the aid of the operation manual. Ask the customer to store the installation manual along with the operation manual for future reference.

|  WARNING | |
|--|--|
| Ask your dealer or qualified personnel to carry out installation work. Do not attempt to install the remote controller yourself. Improper installation may result in water leakage, electric shocks or fire. | |
| Consult your local dealer regarding relocation and reinstallation of the remote controller. Improper installation work may result in leakage, electric shocks or fire hazards. | |
| Install the remote controller in accordance with the instructions in this installation manual. Improper installation may result in water leakage, electric shocks or fire. | |
| Be sure to use only the specified accessories and parts for installation work. Failure to use the specified parts may result in the unit falling, water leakage, electric shocks or fire. | |
| Install the remote controller on a foundation strong enough to withstand the weight of the remote controller. A foundation of insufficient strength may result in the remote controller falling and causing injury. | |
| Electrical work must be performed in accordance with relevant local and national regulations and with instructions in this installation manual. Be sure to use a dedicated power supply circuit only. Insufficiency of power circuit capacity and improper workmanship may result in electric shocks or fire. | |
| Always perform installation work with the power supply shut-off. Touch with energized electric parts causes an electric shock. | |
| Do not disassembly, reconstruct or repair. Electric shock and/or fire are caused. | |
| Make sure that all wiring is secured, the specified wires are used, and that there is no strain on the terminal connections or wires. Improper connections or securing of wires may result in abnormal heat build-up or fire. | |
| The choice of materials and installations must comply with the applicable national and international standards. | |

CAUTION

To avoid leakage and electric shock due to entry of water or insects, fill the wiring through hole with putty.

To avoid electric shocks, do not operate with wet hands.

Do not wash the remote controller with water, as this may result in electric shocks or fire.

Install the indoor and outdoor units, power cord and connecting wires at least 1 meter away from televisions or radios to prevent picture interference and noise.

(Depending on the incoming signal strength, a distance of 1 meter may not be sufficient to eliminate noise.)

Do not install the air conditioner in the following locations:






 
1. Where there is a high concentration of mineral oil spray or vapour (e.g. a kitchen).
Plastic parts will deteriorate, parts may fall off and water leakage could result.
2. Where corrosive gas, such as sulphurous acid gas, is produced.
Corroding of copper pipes or soldered parts may result in refrigerant leakage.
3. Near machinery emitting electromagnetic radiation.
Electromagnetic radiation may disturb the operation of the control system and result in a malfunction of the unit.
4. Where flammable gas may leak, where there is carbon fibre or ignitable dust suspensions in the air, or where volatile flammables such as paint thinner or gasoline are handled.
Operating the unit in such conditions may result in fire.
5. High temperature area or directly flamed point.
Heating and/or firing may be caused.
6. Moist area, or place where may be exposed to water.
If water enters inside of the remote controller, electric shock may be caused and inner electronics may fail.

When remote controller thermo function is used, select the installation location considering the followings.

- A place where average temperature in the room can be detected.
- A place where is not exposed to direct sunlight.
- A place where is far apart from heat source.
- A place where is not affected by outside air due to door opening/closing or the like.

2. Accessories

The following accessories are included.


| Wood screw | Small screw | Clamp | Manual CD | Quick Reference | Wiring retainer |
|---|---|--|--|--|--|
|  (2 pcs.) |  (2 pcs.) |  (1 pc.) |  (1 pc.) |  (1 pc.) |  (1 pc.) |

3. Remote controller installation procedure

3-1 Determine where to install the remote controller.

Make sure to follow "1. Safety Precautions" when determining the location.

3-2 Make a wiring through hole on the wall if the wires are taken out from the back side.

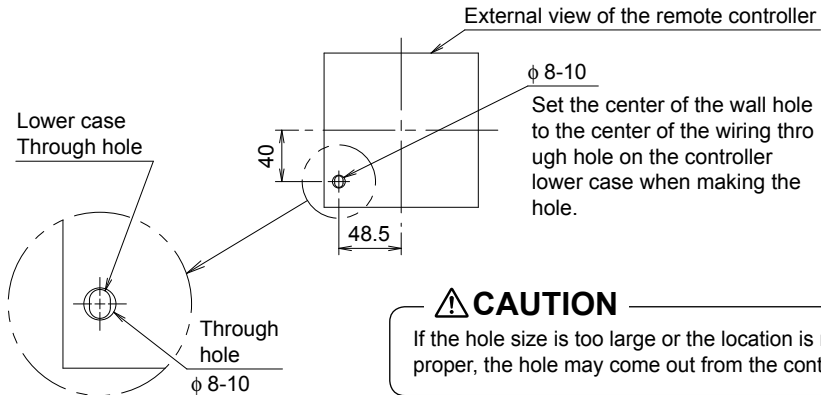


3-3 Remove upper case.

Insert a screwdriver in the recess of lower case to remove the upper case (2 points).


Remote controller PC-board is installed on the upper case. Take care not to damage the PC-board with the screwdriver.

Take care that dust or moisture does not touch the PC-board of removed upper case.

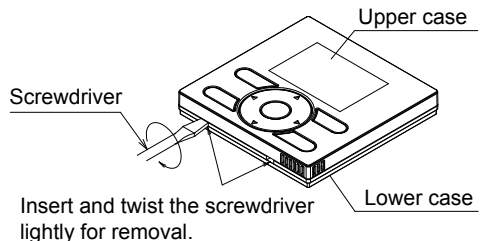


3-4 Determine the direction of controller wiring outlet (back outlet, left outlet, upper center outlet, upper outlet).

3-4-1 Back outlet

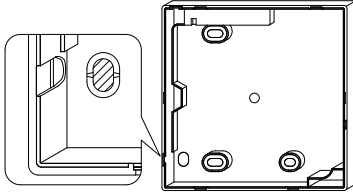


Cut off resin area (hatched area).

3-4-2 Left outlet

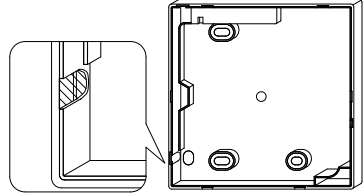


Cut off thin area (hatched area) with nippers or the like, and then remove burr with a file or the like.

3-4-3 Upper outlet

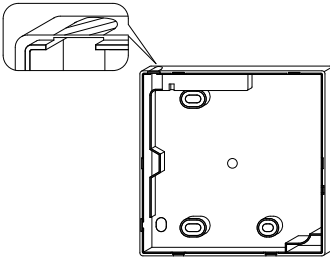

Cut off thin area (hatched area) with nippers or the like, and then remove burr with a file or the like.

3-4-4 Upper center outlet

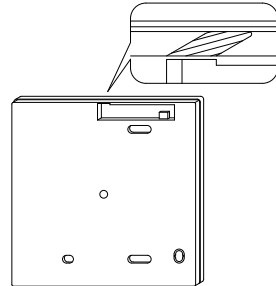

Cut off thin area (hatched area) with nippers or the like, and then remove burr with a file or the like.

3-5 Conduct wiring.


⚠ CAUTION

1. Switch box and transmission wiring are not attached.
2. Do not directly touch the remote controller PC-board.

Wiring Specifications

| | |
|-------------|------------------------------|
| Wiring Type | Sheathed vinyl cord or cable |
| Wiring Size | 0.75-1.25mm ² |

Sheath part in the remote controller case should be stripped.

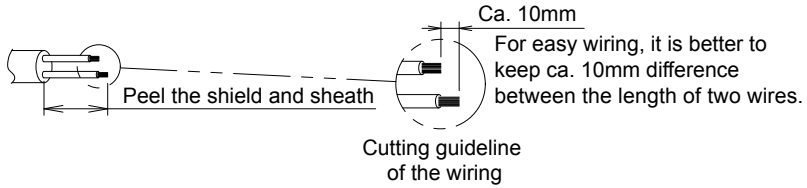


Sheath stripping length:


- Ca. 150mm for upper outlet
- Ca. 200mm for upper center outlet

Connect the terminals (P/P1, N/P2) of the remote controller upper case with the terminals (P1, P2) of the indoor unit. (P1 and P2 have no polarities.)


3-5-1 Back outlet

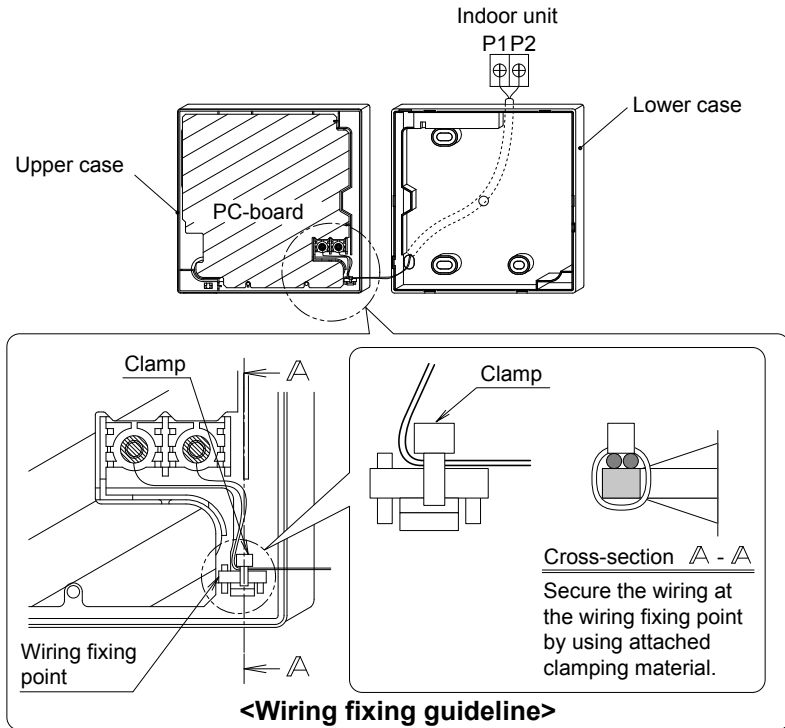


3-5-2 Left outlet

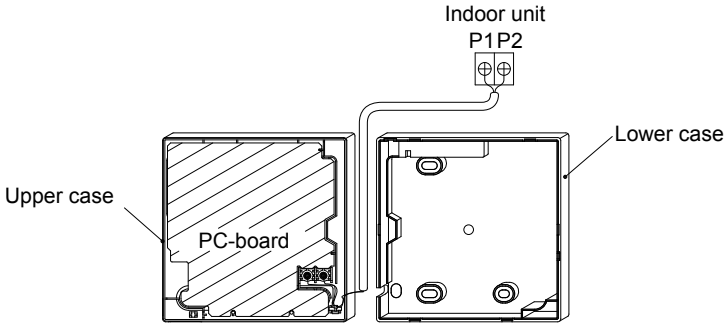

3-5-3 Upper outlet

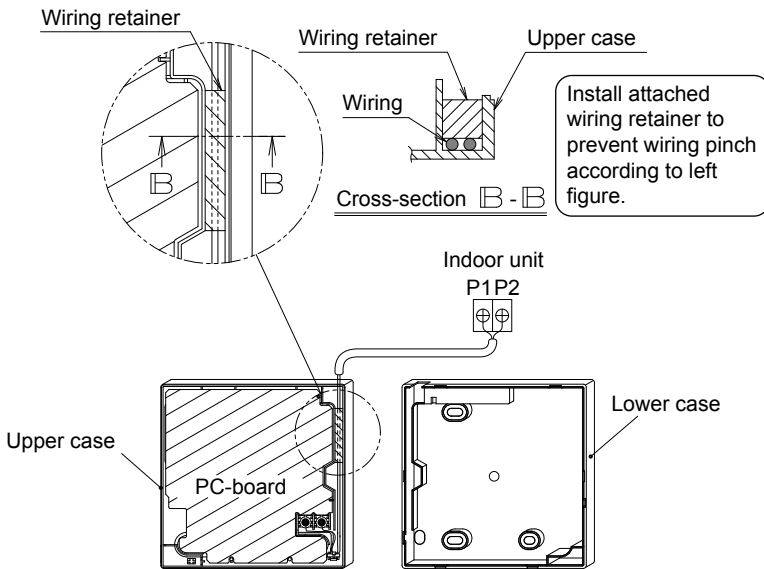

3-5-4 Upper center outlet

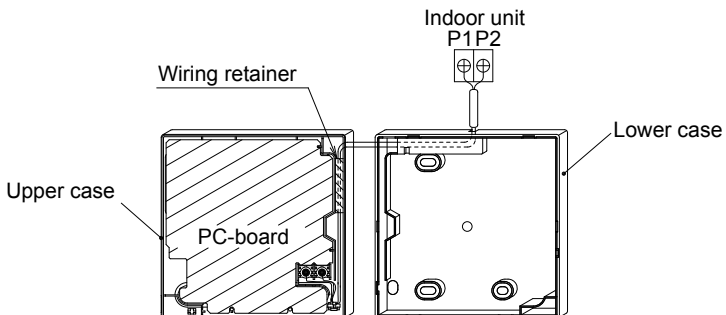

⚠ CAUTION


- Perform wiring apart from a power line not to receive electrical noise (external noise) during the wiring.
- Seal wiring draw-in port securely with putty (field supply) to prevent entry of insects or the like.

3-6 Fixing procedure of lower case.

In the case of wiring center upward drawing or rearward drawing, see wiring procedure first as wiring with the case is needed before fixing.


3-6-1 In the case of installation on the wall


Secure by using attached wood screws (2 pcs.).

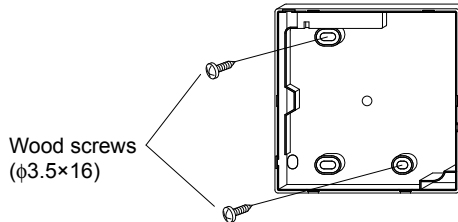

3-6-2 In the case of installation on the switch box

Secure by using attached small screws (2 pcs.).

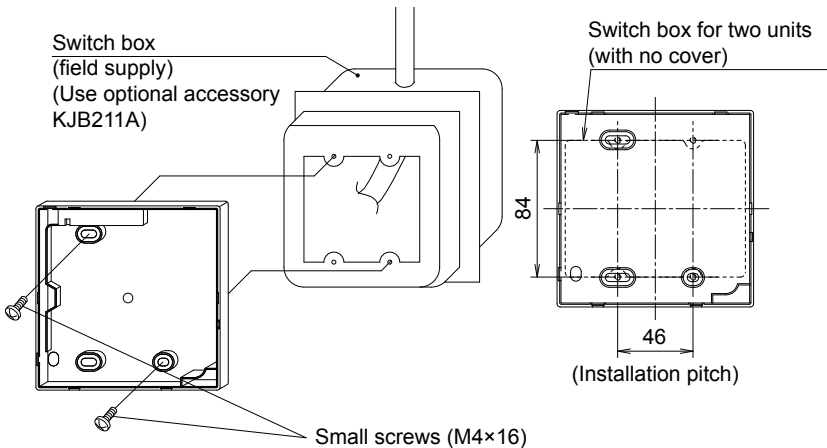

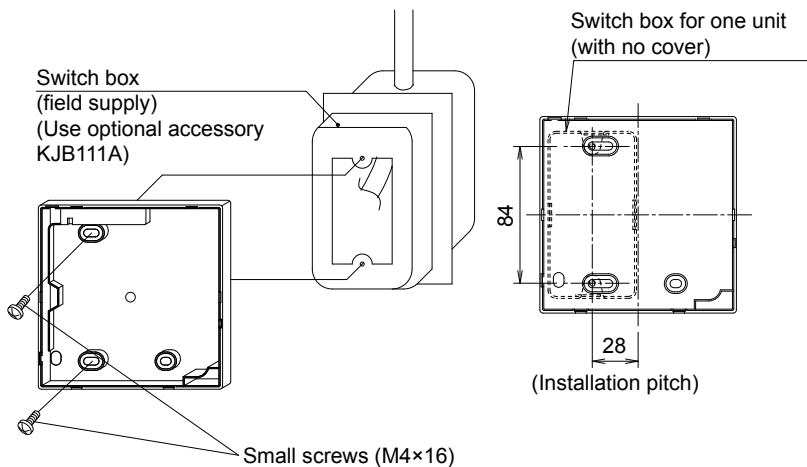


⚠ CAUTION

- Select flat place for installation face as possible.
- And, do not tighten the installation screws too much not to deform the lower case.


3-7 Install the upper case as original condition.

- Align the upper case with tabs of the lower case (6 points), inset and install the upper case.
- Install the wiring with care to prevent the pinch.
- Peel off a protective seal which is attached on the upper case.

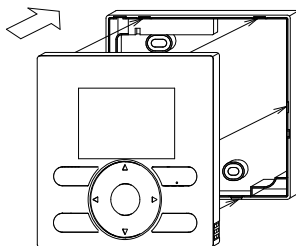

4. Functions and menu items of remote controller buttons

4-1 Functions and menu items

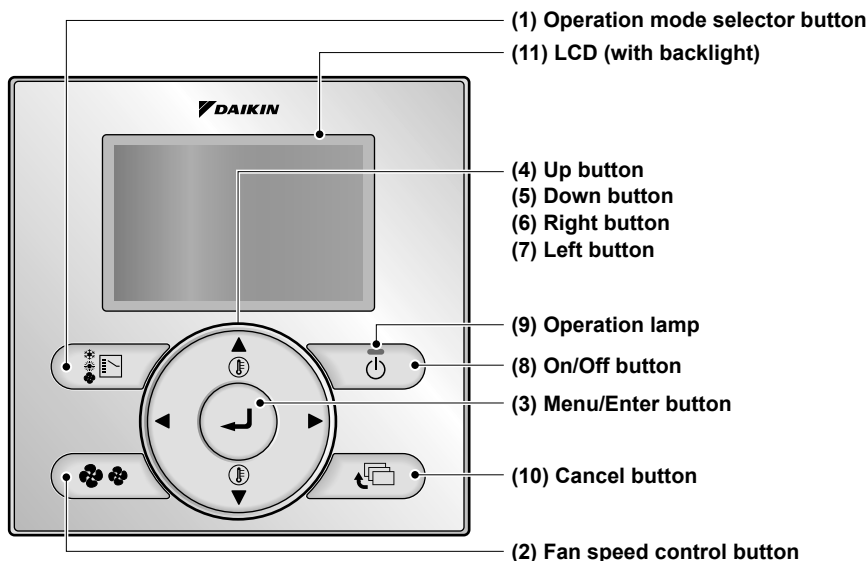

(1) Operation mode selector button

Used to change the mode.

(2) Fan speed control button

Used to change the fan control.

(3) Menu/Enter button

- Used to indicate the main menu. (For details of main menu, see the operation manual.)
- Used to enter the setting item selected.

Main menu

Set temp mode changeover
 Airflow Direction
 Quick Cool/Heat On/Off
 Ventilation
 Timer setting
 Service Contact/Model Info
 Convenient functions
 Setting status list
 Clock setting
 Language changeover

*Depending on connected model

(4) Up button ▲

- Used to raise the set temperature.
- The next items on the upper side will be highlighted. (The highlighted items will be scrolled continuously when the button is kept pressed.)
- Used to change the item selected.

(5) Down button ▼

- Used to lower the set temperature.
- The next items on the lower side will be highlighted. (The highlighted items will be scrolled continuously when the button is kept pressed.)
- Used to change the item selected.

(6) Right button ►

- Used to highlight the next items on the right-hand side.
- Display contents are changed to next screen per page.

(7) Left button ◀

- Used to highlight the next items on the left-hand side.
- Display contents are changed to previous screen per page.

(8) On/Off button

Press once to operate, and press once again to stop.

(9) Operation lamp

Green lamp lights up during operation. The lamp will blink if an malfunction occurs.

(10) Cancel button

- Used to return to the previous screen.
- Press and hold this button for 4 seconds or longer to display field setting menu.

(11) LCD (with backlight)

The backlight will be light for approximately 30 seconds by pressing any operation button.

 
Field setting menu

Test operation ON/OFF
Register Service Contract
Field setting list
Group No. setting
Indoor unit Airnet No. set
Outdoor unit Airnet No. set
Error record
Indoor status display
Outdoor status display
Fan forced operation ON
Main/Sub changeover
Filter element sign OFF

*Depending on connected model


⚠ CAUTION

- Operate the button during backlight lit. However, On/Off may be operated concurrently with backlight lit.
- When 1 indoor unit is controlled by 2 remote controllers, a remote controller backlight which is operated first light.
- To operate Up/Down/Left/Right button, always press ▲ of the button.



4-2 Displays for button operation descriptions

<Field setting menu screen>

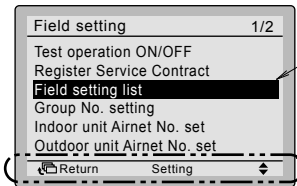

Highlighted display (selected items)

In the highlighted display (selected items) setting screen, button operation descriptions are displayed.

5. Power-on

- Check for completion of indoor/outdoor units wiring.
- Check for closing of EL. COMPO. BOX cover of indoor and outdoor units before power-on.

5-1 Followings are displayed after power-on.

“Connection under check
Please wait for a moment”



During above display, backlight does not light by button operation.

When 1 indoor unit is controlled by 2 remote controllers:


Be sure to set sub remote controller during above display. Press and hold 4 seconds or longer the Operation mode selector button of the remote controller to be set.

When the display is changed from main remote controller to sub remote controller, the setting is completed.




<Main remote controller>

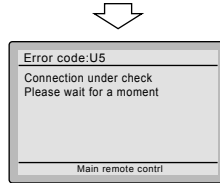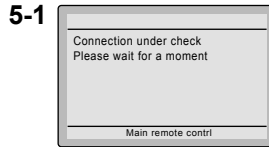


<Basic screen>

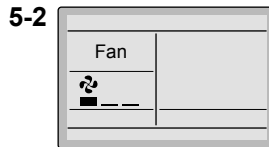


<Sub remote controller>

 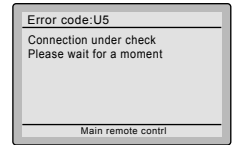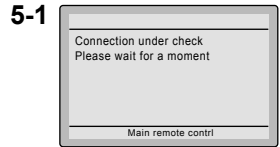

Press and hold 4 seconds or longer the Operation mode selector button of sub remote controller side.

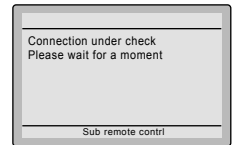

<Basic screen>

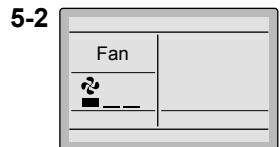

5-2 Basic screen is displayed.

CAUTION

If sub remote controller is not set at power-on in the case of one indoor unit controlled by two remote controllers, “Error code: U5” is displayed in the connection checking screen.

Select the sub remote controller by pressing the Operation mode selector button of either one of the remote controllers for 4 seconds or longer.

If the basic screen is not displayed more than 2 minutes after “sub remote controller” display, shut off the power supply and check the wiring.

NOTE

When selecting a different language, refer to **12. Language changeover.** (See page 22.)

6. Field setting method

6-1 Press and hold Cancel button for 4 seconds or longer.
Field setting menu is displayed.

6-2 Select **Field setting list** in the field setting menu, and press Menu/Enter button.
Field setting list screen is displayed.

6-3 Highlight the mode, and select desired "Mode No." by using ▲▼ (Up/Down) button.


6-4 In the case of setting per indoor unit during group control (When Mode No. such as **20**, **21**, **22**, **23**, **25** are selected), highlight the unit No. and select "Indoor unit No." to be set by using ▲▼ (Up/Down) button. (In the case of group total setting, this operation is not needed.)

In the case of individual setting per indoor unit, current settings are displayed. And, SECOND CODE NO. " - " means no function.

6-5 Highlight SECOND CODE NO. of the FIRST CODE NO. to be changed, and select desired "SECOND CODE NO." by using ▲▼ (Up/Down) button. Multiple identical mode number settings are available.

In the case of group total setting, all of SECOND CODE NO. which may be set are displayed as "*" "*" is changed to SECOND CODE NO. to be set. And, SECOND CODE NO. " - " means no function.


<Basic screen>

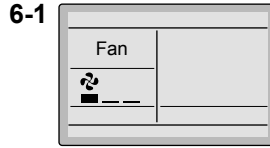

Press and hold Cancel button for 4 seconds or longer during backlight lit.



<Field setting menu screen>

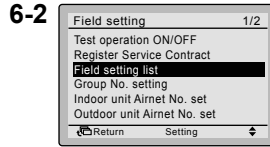


Press Menu/Enter button.




<Field setting screen>

In the case of individual setting per indoor unit

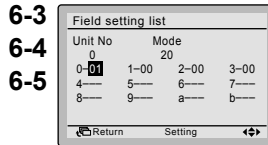

In the case of group total setting

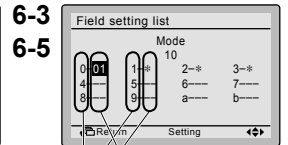

SECOND CODE NO.
FIRST CODE (SW) NO.




Press Menu/Enter button.

6-6 Press Menu/Enter button. Setting confirmation screen is displayed.



<Setting confirmation screen>

6-7 Select **Yes** and press Menu/Enter button. Setting details are determined and field setting list screen returns.

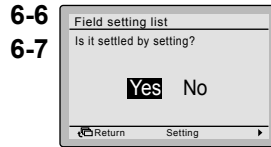

6-8 In the case of multiple setting changes, repeat “6-3” to “6-7”.

6-9 After all setting changes are completed, press Cancel button twice.



Press Menu/Enter button.



Setting confirmation

6-10 Backlight goes out, and “Connection under check Please wait for a moment” is displayed for initialization. After the initialization, the basic screen returns.

⚠ CAUTION

- When an optional accessory is installed on the indoor unit, settings of the indoor unit may be changed. See the manual of the optional accessory.
- For field setting details of the outdoor unit, see installation manual attached to the outdoor unit.

| Mode No. Note) 1 | FIRST CODE NO. | Description of setting | | SECOND CODE NO. Note) 2 | | | | | |
|------------------|--|--|------------------------|-------------------------|---------------------|-------------|--------------------|-------|-------|
| | | | | 01 | 02 | 03 | 04 | | |
| 10 (20) | 0 | Filter Contamination - Heavy/Light (Setting for spacing time of display time to clean air filter) (Setting for when filter contamination is heavy, and spacing time of display time to clean air filter is to be halved) | Ultra long life filter | Light | Approx. 10.000 hrs. | Heavy | Approx. 5.000 hrs. | _____ | _____ |
| | | | Long life filter | | Approx. 2.500 hrs. | | Approx. 1.250 hrs. | | |
| | | | Standard filter | | Approx. 200 hrs. | | Approx. 100 hrs. | | |
| | 1 | Long-life filter type (setting of filter sign indication time). (Change setting when ultra-long filter is installed) | Long-life filter | Ultra-long life filter | _____ | _____ | | | |
| 2 | Thermostat sensor in remote controller | Use | Not use | _____ | _____ | | | | |
| 3 | Spacing time of display time to clean air filter count (setting for when the filter sign is not to be displayed) | Display | Do not display | _____ | _____ | | | | |
| 11 (21) | 0 | Setting number of connected Sky Air simultaneous operation system indoor units (setting for simultaneous operations system) | Pair | Twin | Triple | Double twin | | | |

| Mode No. Note) 1 | FIRST CODE NO. | Description of setting | SECOND CODE NO. Note) 2 | | | |
|---------------------|----------------|---|-------------------------|--|------------------------------|-------|
| | | | 01 | 02 | 03 | 04 |
| 12 (22) | 1 | ON/OFF input from outside (setting for when forced ON/OFF is to be operated from outside). | Forced OFF | ON/OFF operation | _____ | _____ |
| | 2 | Thermostat differential changeover (setting for when using remote sensor). | 1°C | 0.5°C | _____ | _____ |
| 13 (23) | 0 | High air outlet velocity (for high ceiling applications). | ≤2.7m | >2.7≥3.0m | >3.0≥3.5m | _____ |
| | 1 | Selection of airflow direction (setting for when a blocking pad kit has been installed). | 4-way flow | 3-way flow | 2-way flow | _____ |
| | 3 | Selection of airflow function (setting for when using a decoration panel for outlet). | Equipped | Not equipped | _____ | _____ |
| | 4 | Airflow direction range setting. | Upper | Normal | Lower | _____ |
| | 6 | Setting the external static pressure (setting according to the connected duct resistance) (for FHYK, follow the high ceiling setting) | Normal (Normal) | High static pressure (High ceiling) | Low static pressure _____ | _____ |
| 15 (25) | 3 | Drain pump operation with humidifying. | Equipped | Not equipped | _____ | _____ |
| 1c | 1 | Thermostat sensor in remote controller (for limit operation and Home leave function only) | Not use | Use | _____ | _____ |
| | 3 | Permission level setting | Level 2 | Level 3 | _____ | _____ |
| 1e | 2 | Home leave function | Not permitted | Permitted | _____ | _____ |

- Notes) 1. Though setting is performed totally in the group, set Mode No. in the parenthesis when individual setting per indoor unit or checking after the setting should be performed.
2. SECOND CODE NO. at factory shipment is set to "01". However for the following cases it is set to "02".
- Airflow direction range setting (except round flow cassette)
 - Thermostat sensor in remote controller (SkyAir only)
 - Thermostat sensor in remote controller for limit operation and Home leave function only
3. Any function which the indoor unit does not have is not displayed.

7. Test operation method (in the case of SkyAir)

* In the case of VRV, see the manual attached to the outdoor unit.

Also see installation manuals attached to the indoor unit and the outdoor unit.

- Check that wiring work of the indoor unit and the outdoor unit is completed.
- Check that EL. COMPO. BOX cover of the indoor unit and the outdoor unit is closed.
- After refrigerant piping, drain piping and electric wiring are completed, clean inside of the indoor unit and decorative panel.
- Perform the test operation according to following procedure.

7-1 Make sure to turn on the power supply more than 6 hours before operation start with front panel closed to protect compressor.

7-2 Confirm that stop valves of both liquid and gas are opened.

<Make sure that outer panel and piping cover is closed before operation (danger of electric shock). >

* After air purge by vacuum pump, refrigerant pressure may not rise even though the stop valve is opened. The reason is that refrigerant system of the outdoor unit is blocked by electrical expansion valve or the like. Operation is no problem.


7-3 Set the operation mode to cooling by using the remote controller.

7-4 Press and hold Cancel button for 4 seconds or longer. Field setting menu is displayed.

7-5 Select **Test operation ON/OFF** in the field setting menu, and press Menu/Enter button. Basic screen returns and "Test operation" is displayed.

Notes for backlight

- The backlight will be light for approximately 30 seconds by pressing any operation button.
- Operate the buttons during the backlight lit. However, On/Off can be operated concurrently with the backlight lit.

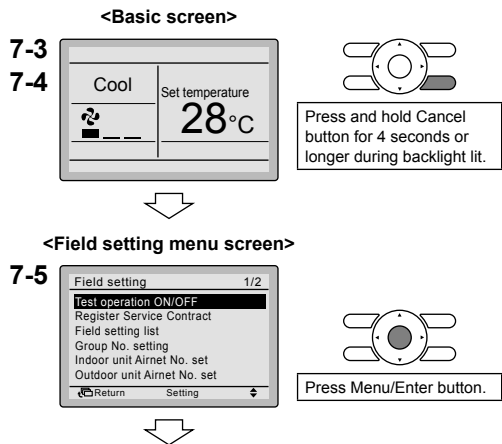

7-6 Press On/Off button within about 10 seconds. The test operation starts. Check operation condition for 3 minutes.

* Note) In the case of above-mentioned procedures **7-5** and **7-6** in reverse order, test operation can start as well.

7-7 Press Menu/Enter button in the basic screen. Main menu is displayed.

7-8 In the case of a model having airflow direction setting function, select **Airflow Direction** in the main menu and check that airflow direction is actuated according to the setting. For operation of airflow direction setting, see the operation manual.

7-9 After the operation of airflow direction is confirmed, press Menu/Enter button. Basic screen returns.

7-10 Press and hold Cancel button for 4 seconds or longer in the basic screen. Field setting menu is displayed.


7-11 Select **Test operation ON/OFF** in the field setting menu, and press Menu/Enter button. Basic screen returns and normal operation is conducted.

7-12 Check the functions according to the operation manual.

7-13 When the decorative panel is not installed, shut off the power supply after the test operation finishes.

- If interior work is not completed after the test operation finish, explain to the customer that operation should not be performed until the interior work completion to protect the indoor unit.

(If the operation is performed, the indoor unit may be contaminated with the materials which arise from paints or adhesives during the interior work, and water splash or water leak may occur.)

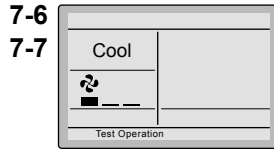


Press On/Off button (within 10 seconds).

7-7





<Main menu screen>

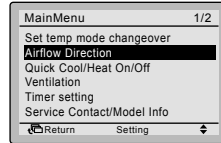

Press Menu/Enter button.

 
7-9

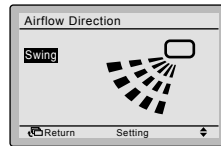

Change the airflow direction by using ▲▼ (Up/Down)button.




7-10

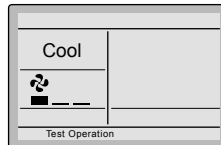

Press and hold Cancel button for 4 seconds or longer during backlight lit.



7-11

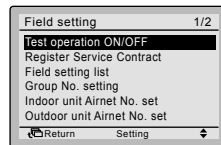

Press Menu/Enter button.



<Basic screen>

⚠ CAUTION

- If operation is not available due to any malfunction, refer to following **Failure diagnosis method**.
- After the test operation finishes, check that error code record is not displayed in the Service Contact/Model Information screen of the main menu according to the following procedure.

7-14 Press Menu/Enter button in the basic screen. Main menu screen is displayed.

7-15 Select **Service Contact/Model Info** in the main menu, and press Menu/Enter button.

7-16 Service Contact/Model Information screen is displayed. Check that error code record is not displayed in the screen.

* Screen which does not display the error code record means normal status.


7-17 If the error code record is displayed, conduct the failure diagnosis referring to <Error code list> in the installation manual of the indoor unit. After the failure diagnosis finishes, press and hold On/Off button for 4 seconds or longer in the “Service Contact/Model Info” screen to erase the error code record.

Failure diagnosis method

- When the remote controller displays any item in following table, inspect the details in the table.
- If a error occurs, “code” is displayed in the LCD like right figure. Conduct the failure analysis referring to “Error code list” in the installation manual of the indoor unit. And when the unit No. which detected the error during group control is confirmed, refer to “**8. Checking procedure of error record**”.

<Basic screen>

7-14

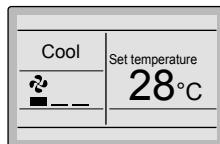


Press Menu/Enter button.



<Main menu screen>

7-15

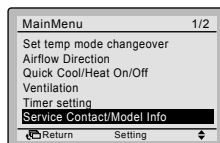


Press Menu/Enter button.




7-16

7-17

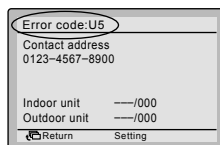

Press and hold On/Off button for 4 seconds or longer during backlight lit.

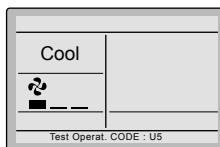

| Remote controller display | Description |
|---|---|
| No display | <ul style="list-style-type: none"> • Power outage, power voltage error or open-phase • Wrong wiring (between indoor and outdoor units) • Indoor PC-board assembly failure • Remote controller wiring disconnection • Remote controller failure • Fuse blow (outdoor unit) |
| Display of "Connection under check Please wait for a moment" is turned on. * | <ul style="list-style-type: none"> • Indoor PC-board assembly failure • Wrong wiring (between indoor and outdoor units) |

* Though

"Connection under check

Please wait for a moment" is displayed for 90 seconds at maximum after power-on, this does not mean a failure. (Determine after 90 seconds.)

8. Checking procedure of error record

8-1 Press and hold Cancel button for 4 seconds or longer in the basic screen. Field setting menu is displayed.

8-2 Select **Error record** in the field setting menu, and press Menu/Enter button. The error record menu screen is displayed.

8-3 Select **Remote controller record** in the error record menu, and press Menu/Enter button. Error codes and unit No. can be confirmed in the error record display screen.

8-4 In the error record, 10 items from the latest are displayed in order.


8-5 Press Cancel button in the error record display screen 3 times. The basic screen returns.

8-1 <Basic screen>



<Field setting menu screen>


8-2

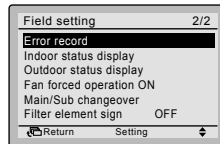

Press Menu/Enter button.




8-3

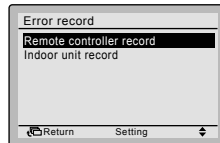

Press Menu/Enter button.

8-4

8-5

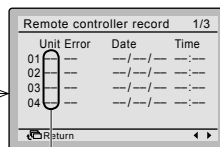


Unit No.

Latest record

9. Registration method of the service contract

- Registration of the service contract.


- 9-1** Press and hold Cancel button for 4 seconds or longer in the basic screen.
Field setting menu is displayed.
- 9-2** Select **Register Service Contract** in the field setting menu, and press Menu/Enter button. "Register service contract" menu screen is displayed.
- 9-3** Select **Register Service Contract**, and press Menu/Enter button.
- 9-4** Enter the telephone number.
Numeric varies by using ▲▼ (Up/Down) button. Enter from the left end, and blank digit should be left as "-".
- 9-5** Press Menu/Enter button.
Setting confirmation screen is displayed.
- 9-6** Select **Yes** and press Menu/Enter button.
Setting details are determined and field setting menu screen returns.
- 9-7** Press Cancel button once.
The basic screen returns.

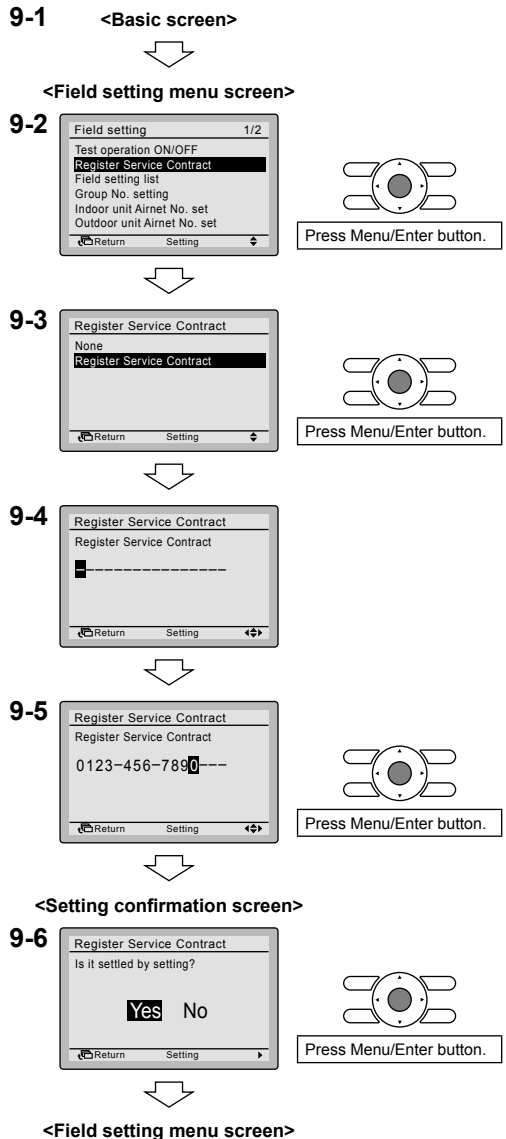

10. Confirmation of registered details

10-1 Press Menu/Enter button in the basic screen.
Main menu is displayed.
Select **Service Contact/Model Info** in the main menu, and press Menu/Enter button.

10-2 Press Cancel button twice.
The basic screen returns.

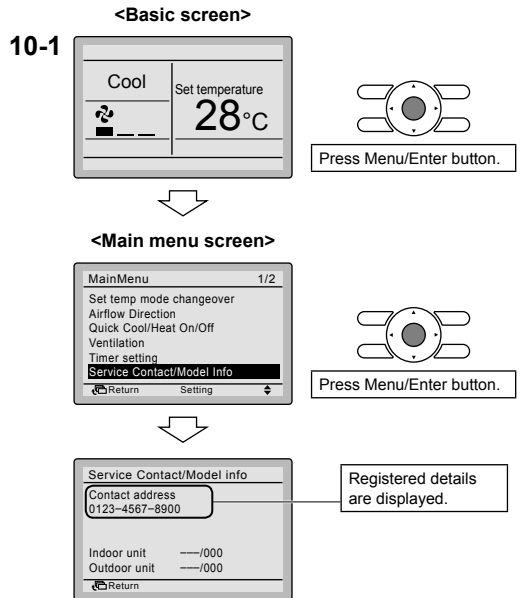

11. Clock Setting

11-1 Press Menu/Enter button in the basic screen.

Main menu is displayed.

Select **Clock setting** in the main menu, press Menu/Enter button.

11-2 Select “year”, “month”, “day” and “time” by using ◀▶ (Left/Right) button and set by using ▲▼ (Up/Down) button in the clock setting screen. During the button is pressed and held, numeric changes continuously.

* Day of the week is set automatically.

11-3 Press Menu/Enter button.

Setting confirmation screen is displayed.

11-4 Select **Yes** and press Menu/Enter button.

Setting details are confirmed and basic screen returns.


* If duration of power outage exceeds 48 hours, reset is needed.

<Basic screen>



<Main menu screen>


11-1

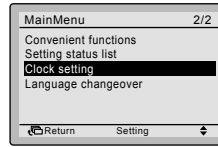

Press Menu/Enter button.



11-2

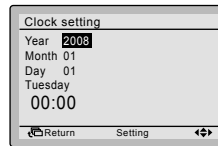


11-3



Press Menu/Enter button.



11-4

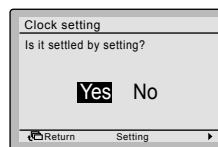

Press Menu/Enter button.



<Basic screen>

12. Language changeover

12-1 Press Menu/Enter button in the basic screen.

Main menu is displayed.

Select **Language changeover** in the main menu, press Menu/Enter button.

12-2 Press ▲▼ (Up/Down) buttons to select “Language” on the language changeover screen.

English/Deutsch/ Français/Español/
Italiano/Ελληνικά/Nederlands/
Portugues/Русский/Түркçe
Pressing Menu/Enter button.


Setting details are confirmed and basic screen returns.

<Basic screen>



<Main menu screen>


12-1

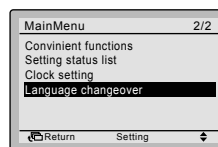

Press Menu/Enter button.



12-2

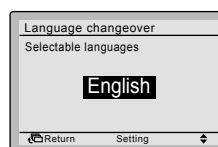

DAIKIN INDUSTRIES, LTD.

Head office:

Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,
Kita-ku, Osaka, 530-8323 Japan

Tokyo office:

JR Shinagawa East Bldg., 2-18-1, Konan,
Minato-ku, Tokyo, 108-0075 Japan

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium