

Wall Mounted Type Series

Neo Forte : AVXWN**

Air Conditioner user manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please
register your product at

www.samsung.com/global/register





features of your new air conditioner

- **Cool Summer Offer**

On those hot sweltering summer days and long restless nights, there is no better escape from the heat than the cool comforts of home. Your new air conditioner brings an end to exhausting hot summer days and lets you rest. This summer, beat the heat with your own air conditioner.

- **Cost Efficient System**

Your new air conditioner not only provides maximum cooling power in the summer, but can also be an efficient heating method in the winter with the advanced “Heat pump” system. This technology is up to 300% more efficient than electrical heating, so you can further reduce its running cost. Now, meet year-round needs with one air conditioner.

- **A Look for Everywhere**

The elegant and harmonious design gives priority to the esthetics of your space and complements any of your existing interior décor. With its soft color and rounded-edge shape, the new air conditioner adds class to any room. Enjoy what your air conditioner offers both functionally and esthetically.

- **good'sleep function**

good'sleep mode allows you to set a comfortable sleep temperature while saving energy and having sound sleep.



SAMSUNG

For easy future reference write the model and serial number down. You will find your model number on the right side of the air conditioner.

Model # _____

Serial # _____

safety information












To prevent electric shock, disconnect the power before servicing, cleaning, and installing the unit.

SAFETY INFORMATION

Before using your new air conditioner, please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance.

Because the following operating instructions cover various models, the characteristics of your air conditioner may differ slightly from those described in this manual. If you have questions, call your nearest contact center or find help and information online at www.samsung.com.

What the icons and signs in this user manual mean:


 WARNING	Risk of death or serious personal injury.
 CAUTION	Potential risk of personal injury or material damage.
 CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your air conditioner, follow these basic safety instructions:
	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions carefully.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the contact center for help.
	Recommended instructions or useful information for use.

These warning signs are here to prevent injury to you and others.

Please follow them carefully.




After reading this section, keep it in a safe place for future reference.

SEVERE WARNING SIGNS


-  **Do not cut the power plug and connect to a different power cable.**
Never attempt to lengthen the power cable.
 - Potential risk of fire or electric shock.
- Do not yank the power cable and touch the power plug with wet hands.**
 - Potential risk of fire or electric shock.
- Never use a damaged power plug, power cable, or loosened power receptacle.**
 - Potential risk of fire or electric shock.

safety information

SEVERE WARNING SIGNS

-  **Do not place the air conditioner near hazardous substances or equipment that releases free flames to avoid fires, explosions or injuries.**
 - Potential risk of fire hazard or explosion.
- Do not spray flammable gases such as insecticide near the air conditioner.**
 - Potential risk of electric shock, fire or unit malfunction.
- Do not block or place items in front of the air conditioner. Do not step, hang onto, or place heavy items on the air conditioner.**
 - Potential risk of personal injury.
- Do not insert anything such as fingers or branches into the air conditioner vents.**
 - Keep children away from the air conditioner. Potential risk of personal injury.
- Do not install the air conditioner in areas exposed to the inflammable gas leakage or the potential risk of gas leakage.**
 - Potential risk of fire hazard or explosion.
- Do not install the outdoor unit at an unstable place such as outer high wall of an apartment or building and on a outside of terrace to avoid falling.**
 - If the outdoor unit falls, it may cause personal injury or loss of property.
-  **Consult the place of purchase or a contact center to disassemble or reinstall the air conditioner.**
 - Potential risk of unit malfunction, water leakage, electric shock, or fire.
- Do not connect the air conditioner with heating apparatus or do not attempt to disassemble, remodel or repair it by yourself.**
 - Potential risk of malfunction, electric shock or fire. If repairs are needed, consult the contact center.
-  **Consult the place of purchase or a contact center to install the air conditioner.**
 - Improper installation carries a risk of unit malfunction, water leakage, electric shock or fire.
 - If installing in specialty areas, such as a factory complex or saline coastal area, consult the place of purchase or contact center for specific installation details.
- Install the air conditioner with the support bracket securely fastened to use for an extended period of time.**
 - If the air conditioner falls, it may cause personal injury or loss of property.
- Ensure the air conditioner is installed in compliance with current national safety standards.**
- Use a rated circuit breaker only.**
 - Never use steel wires or copper wires as a circuit breaker. It may cause fire or unit malfunction.
- Use an exclusive power source for the air conditioner.**
 - Potential risk of electric shock or fire.
- Do not put undue stress on the power cable or place heavy objects on it.**
- Do not bend the power cable excessively.**
 - Potential risk of fire or electric shock.




 **If the air conditioner becomes wet, turn the power off immediately and call your nearest contact center.**


- Potential risk of fire or electric shock.

Install an exclusive circuit breaker and short-circuit breaker for the air conditioner.

- Potential risk of electric shock or fire.

If the power cable or cord is damaged, the manufacturer, a qualified service technician must replace it to avoid a potential risk.

 **Disconnect the air conditioner from power supply before it is repaired or disassembled.**


 **Use a receptacle that has a ground terminal. The receptacle must be used exclusively for the air conditioner.**

- Improper electrical grounding may cause electric shock or fire.

Ensure proper ground has been established when installing the air conditioner. Do not connect the ground cable of the unit to a gas pipe, a water pipe or a telephone line.

- Potential risk of electric shock.

CAUTION SIGNS

 **Ensure no water gets into the air conditioner.**

- Potential risk of fire or electric shock.

Do not install the air conditioner close to heating appliances to avoid damage.

Turn off the air conditioner using the provided remote control or control accessory (if provided). Do not unplug to turn off the unit (unless there is an immediate danger).

Do not open the front grille during operation.

- Potential risk of electric shock or unit malfunction.

Cool air should not flow directly towards people, pets, and plants.

- It is harmful to your health, pets, and plants.

Do not run the air conditioner for an extended period of time in a room with the door closed or with babies, elderly or disabled people.

- Open the door or windows to ventilate your room at least once an hour to prevent oxygen shortage.

Do not use the air conditioner as a cooling precision instrument for food, pets, plants, cosmetics or machinery.

- Potential risk of property loss.

Do not drink water from the air conditioner.

- Potential risk of health hazard.

Do not give excessive shock to the air conditioner.

- Potential risk of fire or unit malfunction.

Do not expose the dust filter to direct sunlight while drying.

- Strong direct sunlight may deform the dust filter.




Do not spray water directly on the air conditioner or use benzene, thinner or alcohol to clean the surface of the unit.

- Potential risk of electric shock or fire.
- Potential risk of damage to the air conditioner.



safety information

CAUTION SIGNS

-  Do not place containers with liquid or other objects on the unit.
-  Do not touch the pipe connected to the air conditioner.
 - Potential risk of personal injury or burn.
-  **The air conditioner is composed of moving parts. Keep children away from the unit to avoid physical injury.**

Check for damage on delivery. If damaged, do not install the air conditioner and call the place of purchase immediately.

Make sure the voltage and frequency of the electric system are compatible with the air conditioner.

Insert the dust filter before operating the air conditioner.

 - If there is no dust filter inside the air conditioner, accumulated dust may shorten the life of the air conditioner and cause electricity waste.

Keep indoor temperatures stable and not extremely cold, especially where there are children, elderly or disabled people.

Clean the conditioner after the inner fan stops operating.

 - Potential risk of injury or electric shock.

Clean the dust filter every 2 weeks. Clean the filter more frequently if the air conditioner is operated in dusty areas.

Inspect the condition, electric connections, pipes and external case of the air conditioner regularly by a qualified service technician.

Do not open doors and windows in the room being cooled during operation unless necessary.

Do not block air conditioner vents. If objects block the air flow, it may cause unit malfunction or poor performance.

The packaging material and used batteries of the remote control(optional) must be disposed of in accordance with the national standards.

The refrigerant used in the air conditioner must be treated as chemical waste. Dispose the refrigerant following national standards.

Have a qualified service technician install the air conditioner and perform a trial operation.

Install the air conditioner away from direct exposure to sunlight, heating apparatus, and humid places.

 - Hang a curtain to boost cooling efficiency and to avoid the risk of electric shock.

Firmly connect the drain hose to the air conditioner for a proper water drainage.

 - If it is not drain well, the condensed-water from the indoor unit may overflow and leak into the room.

Install the outdoor unit where operating noise and vibration will not disturb your neighbor and be well-ventilated with no obstacle.

 - Potential risk of malfunction.
 - Operating noise may disturb your neighbor.



-  **Install the shortest possible length of pipe.**
- If the length of pipe is long, the air conditioner life can be shorten and become inefficient.

If a power outage occurs while the air conditioner is working, turn off the power source immediately.

When cleaning the outdoor unit, touch the heat exchanger radiator fins with extreme care.

- Wearing thick gloves can protect your hands.

Make sure there are no obstacles under the indoor unit.

- Potential risk of fire or loss of property.

Make sure that children take precautions against access to the air conditioner and they do not play with the unit.

The maximum input power & current and the input power & current are measured in accordance with the rules given in the IEC/ISO.

Ensure to use the wireless remote control up to a distance of about 7m from the remote control sensor of the air conditioner.

- The air conditioner may not work over the distance of 7m.

Make sure the cover or any obstacle is not near the air conditioner. Allow sufficient space for air circulation.

- Insufficient ventilation may result in poor performance.

Batteries should be removed from the wireless remote control and be kept separate when unused for long period of time.


If failure or damage occurs on the conditions of improper use not followed by the installation manual, there will be an extra labor charge for installing and construction.

- Potential risk of malfunction, electric shock or fire if repairs or installations are attempted by a non-qualified service technician.

-  **Ensure the off-on and protection switches are properly installed.**

Do not use the air conditioner if damaged. If problems occur, immediately stop operation and disconnect the plug from the power supply.

If the air conditioner will not be used for an extended period of time (for example, over several months), unplug the power from the wall.

-  **Call the place of purchase or a contact center if repairs are needed**

- Potential risk of fire or electric shock if disassembly or repairs are attempted by a non-qualified service technician.

If you smell burning plastic, hear strange sounds, or see smoke coming from the unit, unplug the air conditioner immediately and call a contact center.

- Potential risk of fire or electric shock.





contents

VIEWING YOUR AIR CONDITIONER	10	Checking the indoor unit and display
	10	Main parts
	10	Indoor unit display
	11	Removing the front panel
	11	Power button and Room temperature sensor
	12	Checking the remote control
	13	Remote control display
	13	Using the remote control
	13	Installing the batteries

OPERATING BASIC FUNCTION	14	Turning the air conditioner on and off
	14	Selecting operation mode
	14	Auto
	15	Cool
	16	Dry
	17	Fan
	18	Heat
	19	Adjusting the air flow direction
	19	Vertical air flow
	19	Horizontal air flow

**USING ADVANCED FUNCTIONS**

20

20 Using the Turbo function**21 Setting timer**

21 On timer

22 Off timer

23 Combining On timer and Off timer

24 **good'sleep** mode**CLEANING AND MAINTAINING
THE AIR CONDITIONER**

26

26 Cleaning the exterior**26 Cleaning the filter**

26 Air filter

27 Anti-allergy filter

28 Replacing the filter

28 Deodorizing filter

29 Maintaining your air conditioner

29 Periodical checks

30 Internal protections via the unit control system

APPENDIX

31

31 Troubleshooting**32 Operation ranges*****Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)******(Applicable in the European Union and other European countries with separate collection systems)***

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.



viewing your air conditioner

 
Congratulations on the purchase of the air conditioner. We hope you will enjoy the features of your air conditioner and stay cool or warm with optimal efficiency.

Please read the user manual to get started and to make the best use of the air conditioner.


CHECKING THE INDOOR UNIT AND DISPLAY


Carefully unpack your air conditioner, and check the unit to make sure it is not damaged.

Main parts

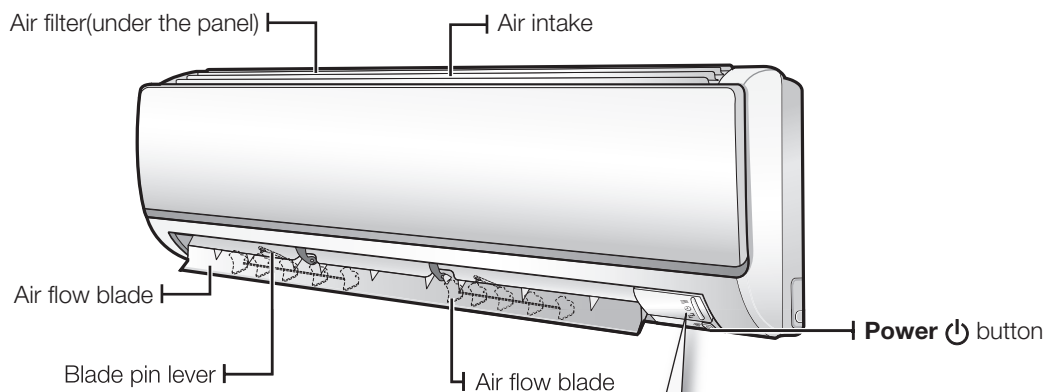


Display

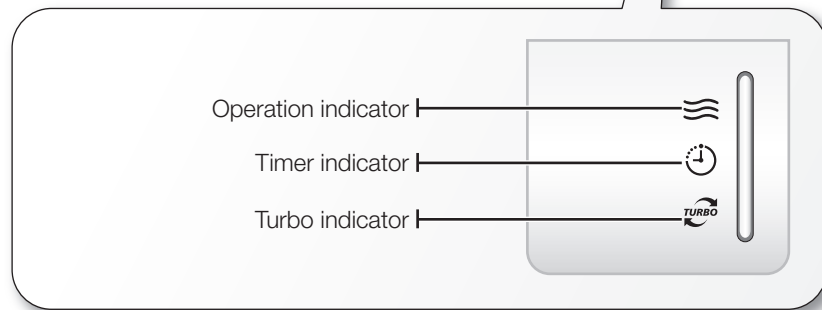 



 Your air conditioner may slightly look different from illustration shown above depending on your model.

 
REMOVING THE FRONT PANEL

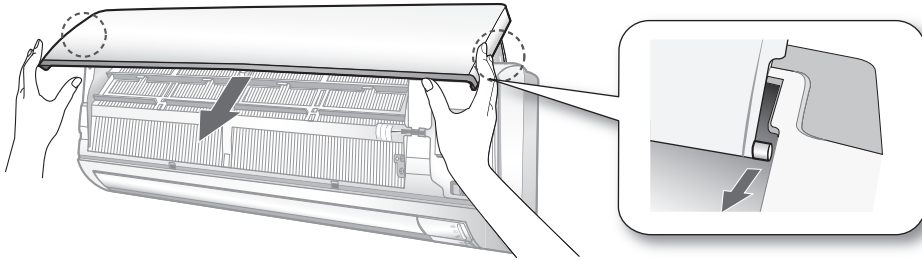Tightly grab both side of the front panel and lift up the panel to open. Then slide the panel towards to remove the panel.



Power button and Room temperature sensor

 
You may locate the **Power**  button on the right bottom side of the air conditioner. If the front panel is open, you can check the room temperature sensor. You can turn on the air conditioner without the remote control by pressing the **Power**  button. The room temperature sensor measures indoor room temperature.

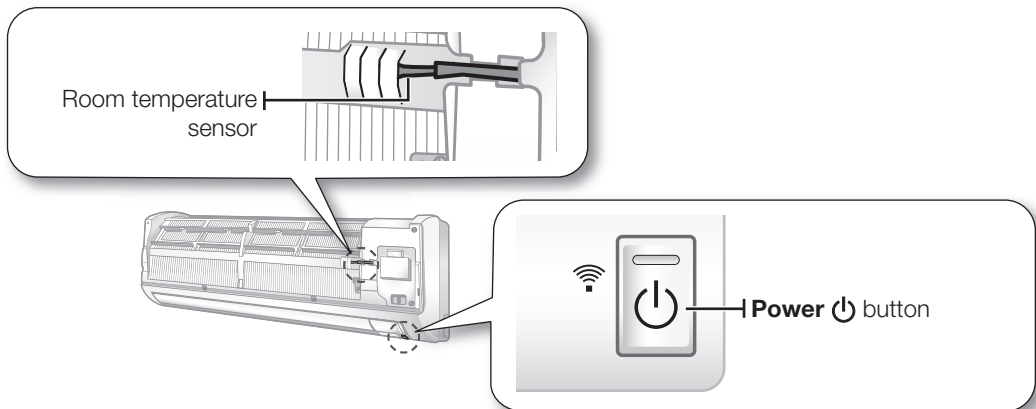


viewing your air conditioner

CHECKING THE REMOTE CONTROL

 
You can activate the air conditioner by pointing the remote control away from it. When using the remote control, always point it directly at the air conditioner.

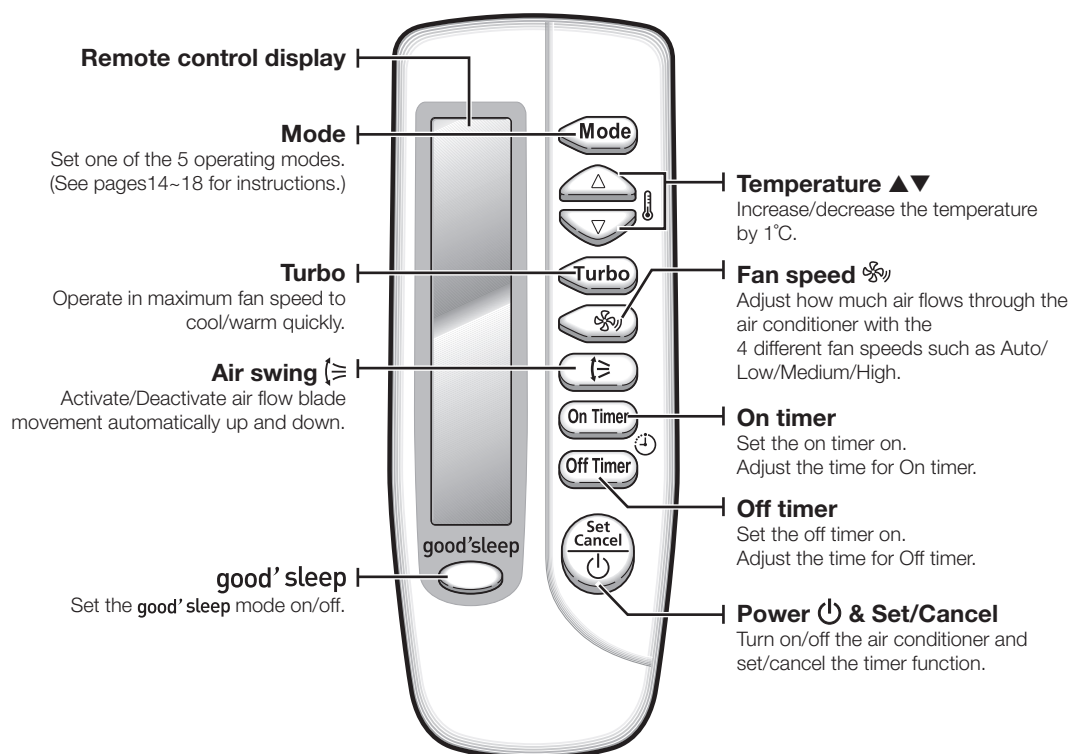

 Each time you press the button, a short beep will sound and a transmit indicator appears on the remote control display.



 Remote control display

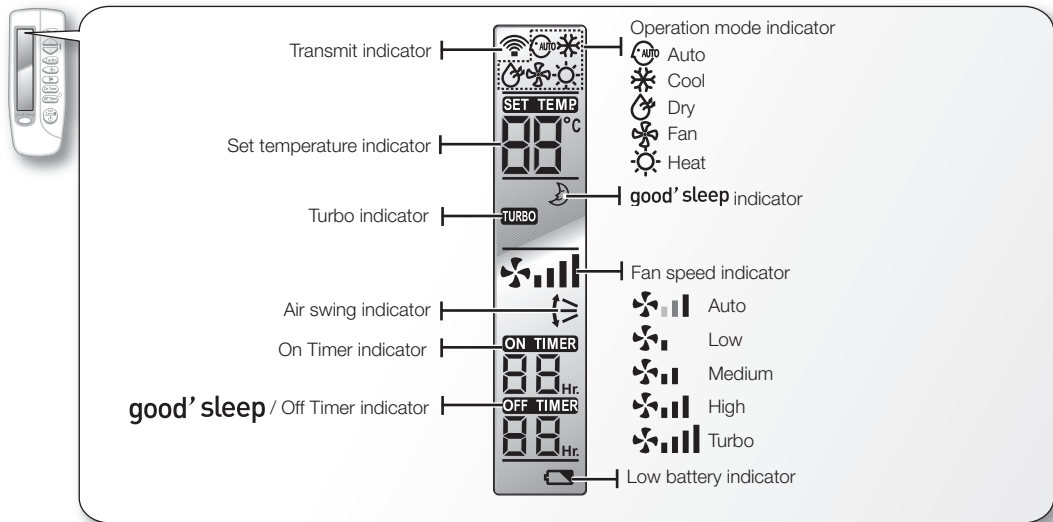


Using the remote control

- Point the remote control towards the remote control sensor of the unit.
- When properly pressing the button on the remote control, you will hear beep sound from the unit.



- The signal may not be received well of electronic lighting style fluorescent lamps, such as inverter fluorescent lamps are in the same space.
- If other electrical products operate by the remote control, call your nearest contact center.

 Installing the batteries

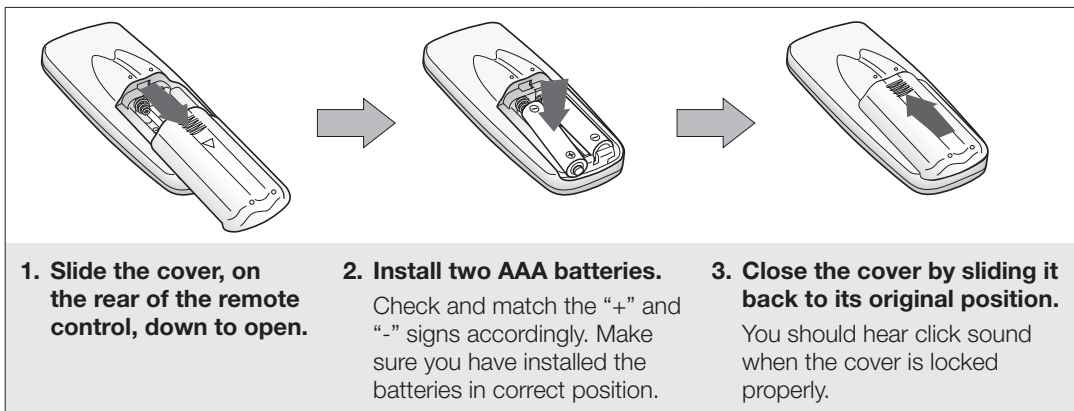

[Correct disposal of batteries in this product]



(Applicable in the European Union and other European countries with separate battery return systems.)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.



operating basic function

TURNING THE AIR CONDITIONER ON AND OFF


Press the **Power**  & **Set/Cancel** button on the remote control.

You will hear a ringing sound and the air flow blade will move up and down automatically when the air conditioner is properly on.
The air conditioner will operate in the most recent operation mode used or Auto mode.

When you turn off the air conditioner, air flow blade will stop moving and remain closed.



Turning on/off your air conditioner without the remote control.

You can operate your air conditioner by pressing the **Power**  button on the right bottom side of the air conditioner.

SELECTING OPERATION MODE

Auto

In Auto mode, the air conditioner will automatically set the temperature and fan speed depending on the room temperature detected by the room temperature sensor.

 
1. Turn on the air conditioner.


Press the **Power**  & **Set/Cancel** button on the remote control.

2. Set the operating mode.



Press the **Mode** button on the remote control until Auto mode and Auto fan speed indicator appear on the remote control display.

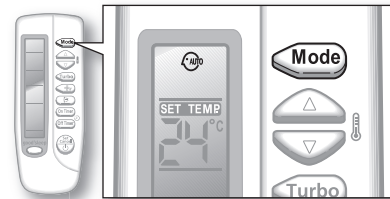The air conditioner will automatically set the operation mode to Cool or Heat depends on the room temperature.

 


-  When you press the **Mode** button, mode will change in order of Auto, Cool, Dry, Fan and Heat.


3. Set the Temperature.

Press the **Temperature**  or  button on the remote control to increase or decrease the desired temperature.

You can set the desired temperature between the range of 16°C~30°C.

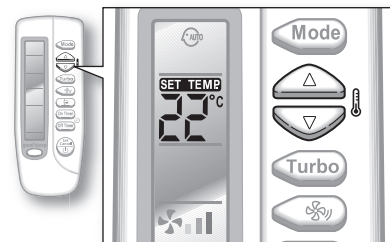

-  You can increase/decrease the temperature by 1°C.

-  • When the air conditioner is already operating in another mode, press the **Mode** button until Auto mode indicator appears on the remote control display.
- When you are using the remote control, make sure correct indicator which matches your selection appears on the remote control display.
- Air flow can be adjusted manually. (See page 19 for instructions.)

Cool

In Cool mode, the air conditioner will cool your room. You can adjust the temperature and the fan speed to feel cooler in hot season.

 
1. Turn on the air conditioner.


Press the **Power**  & **Set/Cancel** button on the remote control.

2. Set the operating mode.



Press the **Mode** button on the remote control until Cool mode indicator appears on the remote control display.

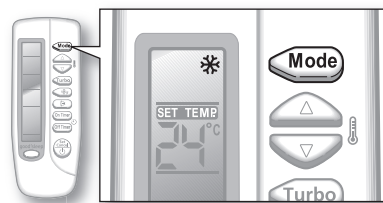The air conditioner operates in Cool mode and it will lower the temperature in your room.

 


-  When you press the **Mode** button, mode will change in order of Auto, Cool, Dry, Fan and Heat.

3. Set the temperature.

Press the **Temperature**  or  button on the remote control to increase or decrease the desired temperature.

You can set the desired temperature between the range of 16°C~30°C.

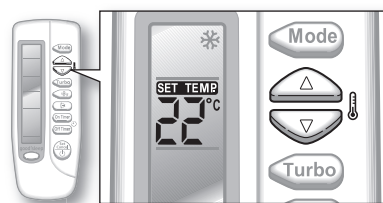


-  You can increase/decrease the temperature by 1°C.


4. Set the fan speed.

Press the **Fan Speed**  button on the remote control to set the desired fan speed.

 If room temperature reaches desired value, the air conditioner will shut off cooling for a while and just the fan runs.

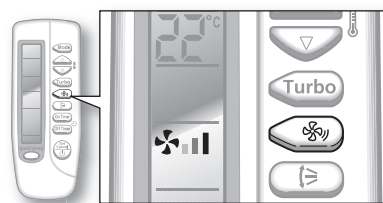

-  When you press the **Fan Speed**  button, fan speed will change in order of Auto, Low, Medium and High.

-  • When you are using the remote control, make sure correct indicator which matches your selection appears on the remote control display.
- Air flow can be adjusted manually. (See page 19 for instructions.)
 - If current outside temperatures are much higher than the selected indoor temperature, it may take time to bring the inner temperature to the desired coolness.

operating basic function

SELECTING OPERATION MODE

Dry

 
The air conditioner in Dry mode acts like a dehumidifier by removing moisture from the indoor air. Dry mode makes the air feel refreshing in a humid climate.


1. Turn on the air conditioner.

Press the **Power**  & **Set/Cancel** button on the remote control.



2. Set the operating mode.

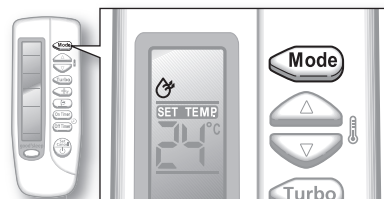Press the **Mode** button on the remote control until Dry mode indicator appears on the remote control display. The air conditioner operates in Dry mode and automatically adjusts the fan speed to Auto.

 


-  When you press the **Mode** button, mode will change in order of Auto, Cool, Dry, Fan and Heat.


3. Set the temperature.

Press the **Temperature**  or  button on the remote control to increase or decrease the desired temperature.

You can set the desired temperature between the range of 18°C~30°C.

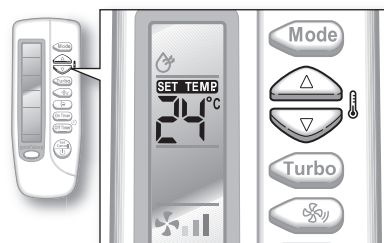

-  You can increase/decrease the temperature by 1°C.

-  • When you are using the remote control, make sure correct indicator which matches your selection appears on the remote control display.
- Air flow can be adjusted manually. (See page 19 for instructions.)

Fan

Fan mode can be selected to ventilate your room. Fan mode will be helpful to refresh the stale air in your room.

 
1. Turn on the air conditioner.


Press the **Power**  & **Set/Cancel** button on the remote control.

2. Set the operating mode.

Press the **Mode** button on the remote control until Fan mode indicator appears on the remote control display.

The air conditioner operates in Fan mode and automatically adjusts the temperature according to the current room temperature.

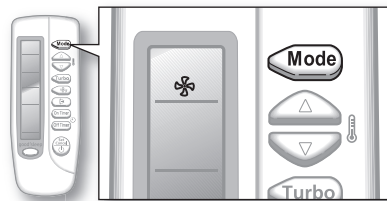




-  When you press the **Mode** button, mode will change in order of Auto, Cool, Dry, Fan and Heat.

3. Set the fan speed.

Press the **Fan Speed**  button on the remote control to set the desired fan speed.



-  When you press the **Fan Speed**  button, fan speed will change in order of Auto, Low, Medium and High.

-  • When you are using the remote control, make sure correct indicator which matches your selection appears on the remote control display.
- Air flow can be adjusted manually. (See page 19 for instructions.)

operating basic function

SELECTING OPERATION MODE

Heat

The air conditioner heats as well as cools. Warm your room with this versatile appliance in the cold of winter.

 
1. Turn on the air conditioner.


Press the **Power**  & **Set/Cancel** button on the remote control.

2. Set the operating mode.



Press the **Mode** button on the remote control until Heat mode indicator appears on the remote control display.

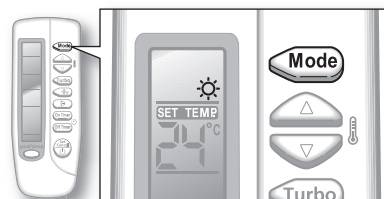The air conditioner operates in Heat mode and warms your room.

 


-  When you press the **Mode** button, mode will change in order of Auto, Cool, Dry, Fan and Heat.

3. Set the temperature.


Press the **Temperature**  or  button on the remote control to increase or decrease the desired temperature.

You can set the desired temperature between the range of 16°C~30°C.

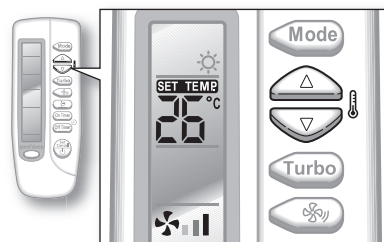




-  You can increase/decrease the temperature by 1°C.


4. Set the fan speed.

 Press the **Fan Speed**  button on the remote control to set the desired fan speed.

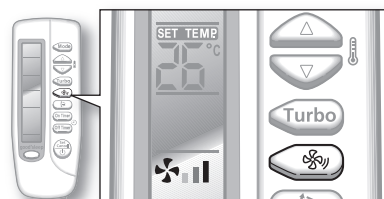If room temperature reaches desired value, heating will stop for a while.



-  • When you press the **Fan Speed**  button, fan speed will change in order of Auto, Low, Medium and High.
- Fan may not operate for about 3~5 minutes at the beginning to prevent any cold blasts while the air conditioner is warming up.

-  • Air flow can be adjusted manually. (See page 19 for instructions.)
- Since the air conditioner heats the room by taking heat energy from outdoor air, the heating capacity may decrease when outdoor temperatures are extremely low. If you feel the air conditioner insufficiently heats, using an additional heating appliance in combination with the air conditioner is recommended.

ADJUSTING THE AIR FLOW DIRECTION

Air flow can be directed to your desired position.

 
Vertical air flow

Air flow blades move up and down.

1. Press the **Air swing** (≡) button on the remote control.

Air swing indicator will be on and air flow blades move up and down continuously to circulate the air.


To keep the air flow direction in a constant position, press the **Air swing** (≡) button on the remote control again.

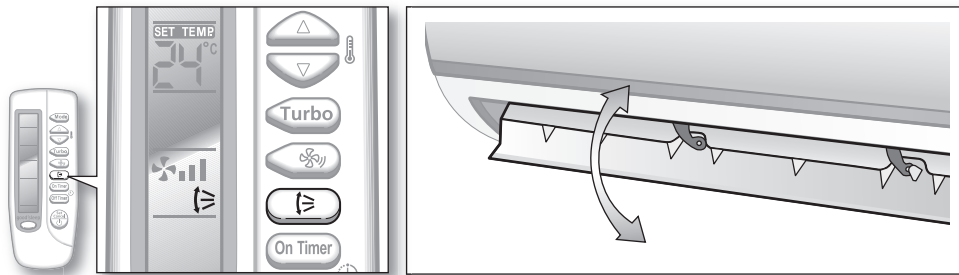

Horizontal air flow

Make sure one of the blade pins that stick out of the air flow blades are not broken.

 1. Move the blade pin lever left or right to keep the air flow direction in a constant position you prefer.

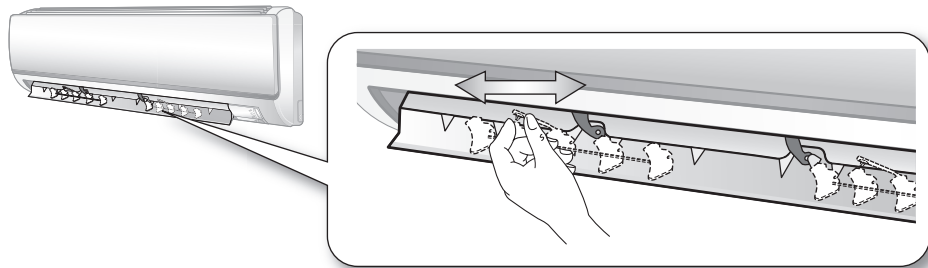

CAUTION Be extremely careful with your fingers while adjusting the Horizontal air flow direction. There is a potential risk of personal injury when the unit is mishandled.

using advanced functions

USING THE TURBO FUNCTION

Turbo function will be helpful to cool or heat your room quickly and effectively by operating at the maximum fan speed for 30 minutes.

 
1. Turn on the air conditioner.

Press the **Power**  & **Set/Cancel** button on the remote control.

2. Set the operating mode.

Press the **Turbo** button on the remote control until Turbo indicator appears on the remote control display.

The air conditioner operates in Turbo fan speed and automatically adjusts the temperature according to the current room temperature. The unit operates for 30 minutes and then operates in last used mode, or in Auto mode if Dry/Fan mode is most recent mode used.

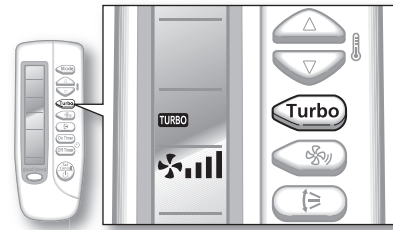


-  Turbo function is only available in Auto/Cool/Heat mode. If Turbo function is selected in Dry/Fan mode, operating mode changes to Auto.

To deactivate Turbo function

1. Press the **Turbo** button on the remote control again.

The air conditioner operates in last used mode, or in Auto mode if Dry/Fan mode is most recent mode used.

-  • When you are using the remote control, make sure corresponding indicator appears on the remote control display.
- Temperature/Fan speed cannot be adjusted while using this function.
 - Air flow can be adjusted manually. (See page 19 for instructions.)
 - When the Turbo function is activated, pressing **Mode** button will automatically cancel the function.

SETTING TIMER

This advanced Timer function allows you to turn on/off your air conditioner automatically even when you are away. Simply set the time and your air conditioner will turn on/off automatically.

On timer

This function allows you to turn on the air conditioner automatically within the time range of 24 hours. On timer is available while your air conditioner is on/off.

1. Press the **On timer** button on the remote control.

On timer indicator blinks on the remote control display.



2. Set the time you want the air conditioner to turn on automatically.

Press the **On Timer** button on the remote control to change the time setting while On timer indicator is blinking.

You can set the time up to 24 hours, increasing in 30 minute unit up to first 3 hours and in hourly unit after first 3 hours.



3. Press the **Power**  & **Set/Cancel** button on the remote control to active it on.

 
The remote control display will show the hour(s) you have set.

The air conditioner will operate automatically at set time and then On timer indicator disappears. If On timer is not set within 10 seconds, the air conditioner will end setting.



4. Set the operating mode.

Press the **Mode** button on the remote control until the desired mode appears on the remote control display.

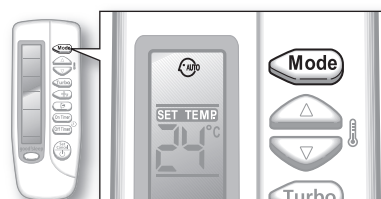The air conditioner will operate in the mode you set.



 On timer function is available in Auto/Cool/Dry/Fan/Heat mode.

-  • Temperature can also be adjusted. (See step 3 on page 15 for instructions.)
- After the set up while the unit is off, approximately after 10 seconds, all the other indicators will be gone except the On timer indicator and remaining time.
- Setting time allows you to change by pressing the **On timer** button. Press the **On timer** button to change time setting and then press the **Power**  & **Set/Cancel** button to active it on.

To deactivate the On timer

1. Press the **Power**  & **Set/Cancel** button on the remote control.

On timer you set will be canceled and On timer indicator will disappear.

using advanced functions

 
SETTING TIMER

Off timer

This function allows you to turn off the air conditioner automatically within the time range of 24 hours. Off timer is functional when the unit is operating.

1. Press the **Off timer** button on the remote control.

Off timer indicator blinks on the remote control display.

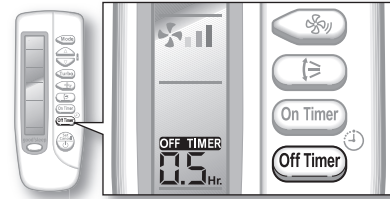


2. Set the time you want the air conditioner to turn off automatically.

Press the **Off Timer** button on the remote control to change the time setting while Off timer indicator is blinking.



You can set the time up to 24 hours, increasing in 30 minute unit up to first 3 hours and in hourly unit after first 3 hours.



3. Press the **Power**  & **Set/Cancel** button on the remote control to activate it on.

The remote control display will show the hour(s) you have set.

The air conditioner will turn off automatically at set time and then Off timer indicator disappears. If Off timer is not set within 10 seconds, the air conditioner will end setting.

-  • Setting time allows you to change by pressing the **Off timer** button. Press the **Off Timer** button to change the time setting and then press the **Power**  & **Set/Cancel** button to activate it on.
- You can combine Off timer function with On timer function to turn on and then off the air conditioner at the desired time. (See page 23 for instructions.)


To deactivate the Off timer

1. Press the **Power**  & **Set/Cancel** button on the remote control.

Off timer you set will be canceled and Off timer indicator will disappear.


Combining On timer and Off timer

You can combine the On timer and Off timer together for more convenient use of the timer function.

1. Set the On timer.
Press the **On Timer** button.
Set the time with **On Timer** button.
Press **Power**  & **Set/Cancel** button to activate the On timer.



 See page 21 for more detail instructions on setting On timer.

2. Set the Off timer.
Press the **Off Timer** button.
Set the time with **Off Timer** button.
Press **Power**  & **Set/Cancel** button to activate the Off timer.

When you set the time, there can be two possible options:

On timer is shorter than Off timer

The air conditioner will turn on and then off automatically. Set up should be done while the air conditioner is off.

For example, If the On timer is set at 3 hours and the Off timer at 5 hours, the air conditioner will turn off automatically 3 hours after the set time and then operate for next 2 hours before turning off automatically.



On timer is longer than Off timer


The air conditioner will turn off and then on automatically. Set up should be done while the air conditioner is operating.

For example, If the On timer is set at 3 hours and the Off timer at 1 hour, the air conditioner will turn off automatically an hour after the set time and remain off for 2 hours before turning on automatically.



 See page 22 for more detail instructions on setting Off timer.

To deactivate the timer combination

1. Press the **Power**  & **Set/Cancel** button on the remote control.
Both of the On and Off timer will be canceled and the indicators will disappear.

using advanced functions

 
SETTING TIMER

good' sleep mode

good' sleep mode allows you to set a comfortable sleep temperature while saving energy and having sound sleep. **good' sleep** mode can be set up when the air conditioner is on.

1. Set the operating mode.

Press the **Mode** button on the remote control until Cool/Heat appears on the remote control display.

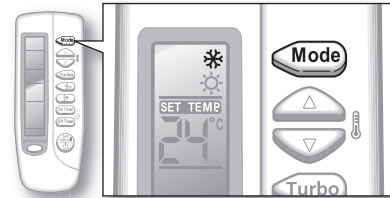

 **good' sleep** is only available in Cool/Heat mode.

2. Press the **good' sleep** button on the remote control.

good' sleep indicator appears and Off timer indicator starts blinking on the remote control display.



3. Set the length of time you want the air conditioner to stay on.

Default **good' sleep** time is set to 8 hours. Press **good' sleep** button on the remote control to change the time setting while Off timer indicator is blinking.

You can set the time up to 12 hours, increasing in 30 minute unit up to first 3 hours and in hourly unit after first 3 hours.




4. Press the **Power**  & **Set/Cancel** button on the remote control to active it on.

The remote control display will show the hour(s) you have set.

When the set time has elapsed, the air conditioner will automatically turn off and then **good' sleep** indicator disappears.

If **good' sleep** mode is not set within 10 seconds, the air conditioner will end setting.

-  • Temperature/Fan speed/Air swing can be adjusted after setting **good' sleep** in Heat mode.
- Temperature can be adjusted and the air conditioner automatically adjusts the Fan speed/Air swing after setting **good' sleep** in Cool mode.

Temperature changes in good' sleep mode

To prevent excessive cooling/heating during sleep, the **good' sleep** mode automatically modifies the temperature setting in accordance with the time setting. Temperature and air current change according to the three stages; Fall asleep, Sound sleep, and Wake up from **good' sleep** mode, and then the air conditioner will automatically turn off when the set time has elapsed.

Three stage **good' sleep** prevents you from having difficulty sleeping in summer/winter night.

① **Fall asleep** : Eases you into sleep by dropping the temperature.

 
② **Sound sleep** : Relaxes your body and raises your temperature slightly.

③ **Wake up from good' sleep mode** :


Allows you to wake up from comfortable intermittent air and it makes you feel refresh.

- Set Off timer in **good' sleep** mode over 5 hours. You feel disturbed sleep if the **good' sleep** is set too short or long because the default is set to 8-hour-operation.
- If the **good' sleep** mode is set less than 4 hours, the operation will stop at the set time. If the **good' sleep** mode is set over 5 hours, it will run as Wake up stage for the last one hour before stop.
- Recommended set temperature is between 25°C~27°C for cooling and 21°C~23°C for heating.

Cool mode

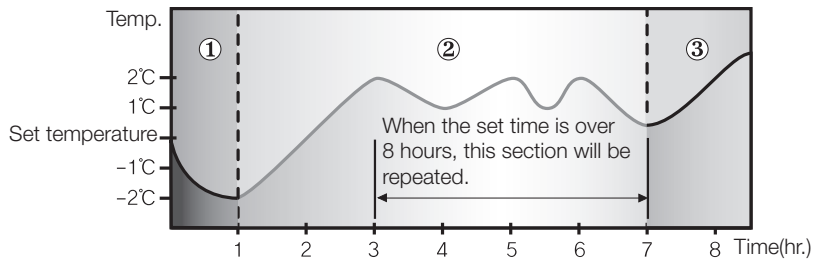

Heat mode

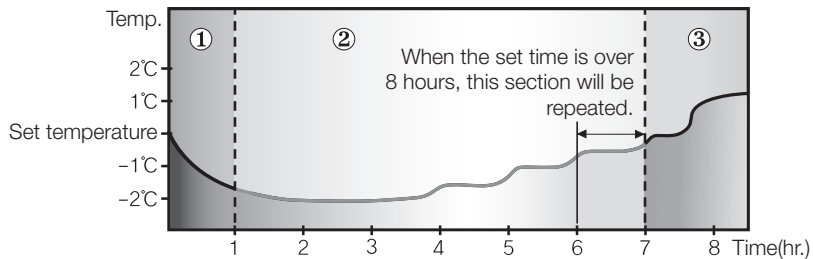 

To deactivate good' sleep mode

1. Press the **Power**  & **Set/Cancel** button on the remote control.

 
good' sleep mode you set will be canceled and **good' sleep** indicator will disappear.

cleaning and maintaining the air conditioner

CLEANING THE EXTERIOR

1. Wipe the surface of the unit with a slightly wet or dry cloth when needed.

CAUTION Do not use Benzene, Thinner or Clorox™. They may damage the surface of the air cleaner and can create a risk of fire.

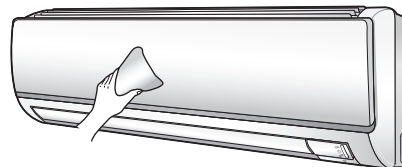

CLEANING THE FILTER

 
When cleaning the filter, make sure to unplug the power from the unit. No special tools are needed to clean it.

Air filter


Washable foam based air filter captures large particles from the air. The filter is cleaned with a vacuum or by hand washing.

1. Remove the front panel.


Tightly grab both side of the front panel and lift up the panel to open. Then slide the panel towards you to remove the panel.

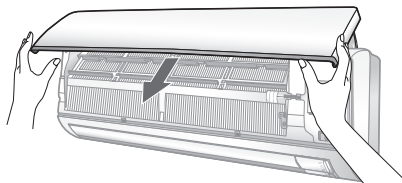

 2. Grab the handle and lift it up. Then, pull the Air filter towards you.

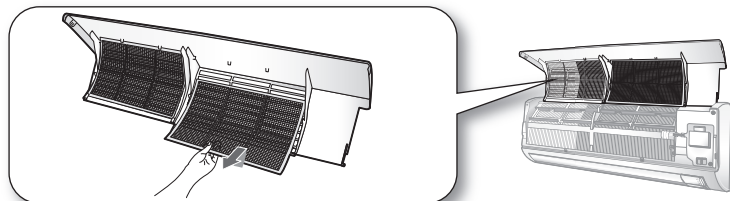

 3. Clean the Air filter with a vacuum cleaner or soft brush. If dust is too heavy, then rinse it with running water and dry it in a ventilated area.

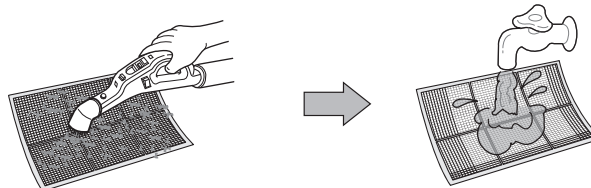

- For the best conditions, repeat every two weeks.
- If the Air filter dries in a confined (or humid) area, odors may generate. If it occurs, re-clean and dry it in a well-ventilated area.

 
4. Insert the Air filter back in its original position.
5. Close the front panel.

Anti-allergy filter


Washable foam based Anti-allergy filter leads to reduction in allergens that thrive in polluted air. The filter is cleaned with a vacuum or by hand washing.

1. Remove the front panel.

Tightly grab both side of the front panel and lift up the panel to open. Then slide the panel towards you to remove the panel.

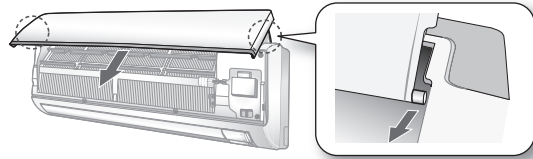


 2. Slide the Anti-allergy filter (color in sky-blue) out to remove it from the slot.

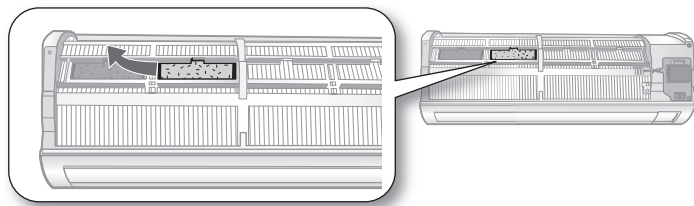

- Anti-allergy filter can be placed in any 4 slots beneath the air filter.
- Front panel of your air conditioner is actually not detachable.

 3. Clean the Anti-allergy filter with a vacuum cleaner or soft brush. Then rinse it with running water and dry it in a ventilated area.

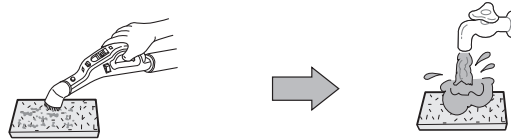

4. Install the Anti-allergy filter back in position.

5. Close the front panel.

- Clean the Anti-allergy filter every 3 months. The cleaning term may differ on usage and environmental conditions.

cleaning and maintaining the air conditioner

REPLACING THE FILTER

 
Replacement filter may be purchased from the retail store or ordered from the dealer where you purchased the unit. If you cannot find one, please call a contact center.

Deodorizing filter


Deodorizing filter absorbs efficiently cigarette smoke, pet odors and other unpleasant smells. Deodorizing filter cleaning is simple, just remove old filter and install a new one.

1. Remove the front panel.

Tightly grab both side of the front panel and lift up the panel to open. Then slide the panel towards you to remove the panel.

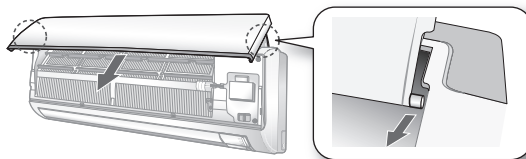

 2. Slide the Deodorizing filter (color in black) out to remove it from the slot.

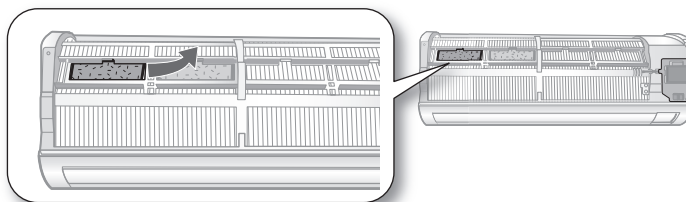

- Deodorizing filter can be placed in any 4 slots beneath the air filter.
- Front panel of your air conditioner is actually not detachable.

3. Install the new Deodorizing filter back in position.

4. Close the front panel.

- The replacement timing of the Deodorizing filter differs depending on usage and environmental conditions.
- Even if Deodorizing and Anti-allergy filters are installed in an inverted position, it will not affect its filtration system.

MAINTAINING YOUR AIR CONDITIONER


If the air conditioner will not be used for an extended period of time, dry the air conditioner to maintain it in best condition.

1. Dry the air conditioner thoroughly by operating in Fan mode for 3 to 4 hours and disconnect the power plug. There may be internal damage if moisture is left in components.
2. Before using the air conditioner again, dry the inner components of the air conditioner again by running in Fan mode for 3 to 4 hours. This helps remove odors which may have generated from dampness.

Periodical checks

Refer to the following chart to maintain the air conditioner properly.

Type	Description	Monthly	Every 4 months	Once a year
Indoor unit	Clean the air filter (1)	●		
	Clean the condensate drain pan (2)			●
	Thoroughly clean the heat exchanger (2)			●
	Clean the condensate drain pipe (2)		●	
	Replace the remote control batteries (1)			●
Outdoor unit	Clean the heat exchanger on the outside of the unit (2)		●	
	Clean the heat exchanger on the inside of the unit (2)			●
	Clean the electric components with jets of air (2)			●
	Verify that all the electric components are firmly tightened (2)			●
	Clean the fan (2)			●
	Verify that all the fan assembly is firmly tightened (2)			●
	Clean the condensate drain pan (2)			●

 The checks and maintenance operations described are essential to guarantee the efficiency of the air conditioner. The frequency of these operations varies according to the characteristics of the area, the amount of dust, etc.

- (1) The described operations should be performed more frequently if the area of installation is very dusty.
- (2) These operations must always be performed by qualified personnel. For more detailed information, see the Installation Manual.


cleaning and maintaining the air conditioner

MAINTAINING YOUR AIR CONDITIONER

Internal protections via the unit control system

This internal protection operates if an internal fault occurs in the air conditioner.

Type	Description
Against cold air	The internal fan will be off to against cold air when the heat pump is heating.
De-ice cycle	The internal fan will be off to against cold air when the heat pump is heating.
Anti-protection of internal battery	The compressor will be off to protect internal battery when the air conditioner operates in Cool mode.
Protect compressor	The air conditioner does not start operating immediately to protect the compressor of the outdoor unit after it has been started.

-  If the heat pump is operating in Heat mode, De-ice cycle is actuated to remove frost from an outdoor unit that may have deposited at low temperatures.
The internal fan is switched off automatically and restarted only after the de-ice cycle is completed.

appendix

TROUBLESHOOTING

Refer to the following chart if the air conditioner operates abnormally. This may save time and unnecessary expenses.


PROBLEM	SOLUTION
The air conditioner does not operating immediately after it has been restarted.	<ul style="list-style-type: none">• Because of the protective mechanism, the appliance does not start operating immediately to keep the unit from overloading. The air conditioner will start in 3 minutes.
The air conditioner does not work at all.	<ul style="list-style-type: none">• Check that the power plug is properly connected. Insert the power plug into the wall socket correctly.• Check if the circuit breaker is switched off.• Check if there is a power failure.• Check your fuse. Make sure it is not blown out.
The temperature does not change.	<ul style="list-style-type: none">• Check if you selected Fan mode. Press the Mode button on the remote control to select another mode.
The cool(warm) air does not come out of the air conditioner.	<ul style="list-style-type: none">• Check if the set temperature is higher (lower) than the current temperature. Press the Temperature ▲ or ▼ button on the remote control to change the set temperature. Press the Temperature ▲ or ▼ button to increase or decrease the temperature.• Check if the air filter is blocked by dirt. Clean the Air filter every two weeks.• Check if the air conditioner has just been turned on. If so, wait 3 minutes.
The fan speed does not change.	<ul style="list-style-type: none">• Check if you selected Auto or Dry mode. The air conditioner automatically adjusts the fan speed to Auto in Auto/Dry mode.
Timer function does not set.	<ul style="list-style-type: none">• Check if you press the Power ⏻ & Set/Cancel button on the remote control after you have set the time.
Odors permeate in the room during operation.	<ul style="list-style-type: none">• Check if the appliance is running in a smoky area or if there is a smell entering from outside. Operate the air conditioner in Fan mode or open the windows to air out the room.
The air conditioner makes a bubbling sound.	<ul style="list-style-type: none">• A bubbling sound may be heard when the refrigerant is circulating through the compressor. Let the air conditioner operate in a selected mode.
Water is dripping from the air flow blades.	<ul style="list-style-type: none">• Check if the air conditioner has been cooling for an extended period of time with the air flow blades pointed downwards. Condensation may generate due to the difference in temperature.
Remote control is not working.	<ul style="list-style-type: none">• Check if your batteries are depleted.• Make sure batteries are correctly installed.• Make sure nothing is blocking your remote control sensor.• Check that there are strong lighting apparatus near the air conditioner. Strong light which comes from fluorescent bulbs or neon signs may interrupt the electric waves.

appendix

OPERATION RANGES

The table below indicates the temperature and humidity ranges the air conditioner can be operated within. Refer to the table for efficient use.

MODE	OPERATIONAL TEMPERATURE		INDOOR HUMIDITY	IF OUT OF CONDITIONS
	INDOOR	OUTDOOR		
COOLING	18°C to 32°C	-5°C to 43°	80% or less	Condensation may occur on the indoor unit with risk to have either water blow off or drops on the floor.
HEATING	27°C or less	-20°C to 24°C	-	Internal protection triggers and the air conditioner will stop.
DRYING	18°C to 32°C	-5°C to 43°C	-	Condensation may occur on the indoor unit with risk to have either water blow off or drops on the floor.

-  The standardized temperature for heating is 7°C. If the outdoor temperature drops to 0°C or below, the heating capacity can be reduced depending on the temperature condition.
If the cooling operation is used at over 32°C(indoor temperature), it does not cool at its full capacity.



ENGLISH





QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
BELGIUM	0032 (0)2 201 24 18	www.samsung.com/be
CZECH REPUBLIC	844 000 844	www.samsung.com/cz
DENMARK	70 70 19 70	www.samsung.com/dk
FINLAND	030-6227 515	www.samsung.com/fi
FRANCE	3260 SAMSUNG(€ 0,15/Min) 08 25 08 65 65(€ 0,15/Min)	www.samsung.com
GERMANY	01805 - SAMSUNG (726-7864 € 0,14/Min)	www.samsung.com
HUNGARY	06-80-SAMSUNG(726-7864)	www.samsung.com
ITALIA	800-SAMSUNG(726-7864)	www.samsung.com
LUXEMBURG	0035 (0)2 261 03 710	www.samsung.com/be
NETHERLANDS	0900-SAMSUNG(726-7864 € 0,10/Min)	www.samsung.com/nl
NORWAY	815-56 480	www.samsung.com/no
POLAND	0 801 801 881 022-607-93-33	www.samsung.com/pl
PORTUGAL	80820-SAMSUNG(726-7864)	www.samsung.com/pt
SLOVAKIA	0800-SAMSUNG(726-7864)	www.samsung.com/sk
SPAIN	902 10 11 30	www.samsung.com
SWEDEN	0771-400 200	www.samsung.com/se
U.K	0845 SAMSUNG (7267864)	www.samsung.com
EIRE	0818 717 100	www.samsung.com/ie
AUSTRIA	0800-SAMSUNG(726-7864)	www.samsung.com/at
SWITZERLAND	0800-SAMSUNG(726-7864)	www.samsung.com/ch

© S F I P D DB98-29217(3)