



Indoor Unit
 NH080PHXEA
 NH160PHXEA

DHW Tank
 NH200WHXEA
 NH300WHXEA
 NH200WHXES
 NH300WHXES

Air to Water Heat Pump -Hydro Unit installation manual



imagine the possibilities

Thank you for purchasing this Samsung product.
 To receive more complete service, please
 register your product at
www.samsung.com/register

© S F I P D DB98-32659A(1)





Contents

- Safety precautions 3
- Product specifications 5
- Typical application examples 8
- Main components 10
- Functional diagram 11
- Dimensional drawing 12
- Installing the unit 13
- Pipe work 15
- Wiring work 22
- Troubleshooting 31
- DHW tank 34



Safety precautions

All materials supplied to this manual are indispensable for the safety of equipment. Users shall establish appropriate safety and health practices and determine the applicability of regulatory limitation based on following descriptions prior to use.



WARNING

- Always disconnect the air to water heat pump from the power supply before servicing it or accessing its internal components.
- Verify that installation and testing operations are performed by qualified personnel.
- Verify that the air to water heat pump is not installed in an easily accessible area.

GENERAL INFORMATION

- ◆ Carefully read the content of this manual before installing the air to water heat pump and store the manual in a safe place in order to be able to use it as reference after installation.
- ◆ For maximum safety, installers shall always carefully read the following warnings.
- ◆ Store the user and installation manual in a safe location and remember to hand it over to the new owner if the air to water heat pump is sold or transferred.
- ◆ This manual explains how to install an indoor unit with a split system with two SAMSUNG units. The use of other types of units with different control systems may damage the units and invalidate the warranty. The manufacturer shall not be responsible for damages arising from the use of non compliant units.
- ◆ The air conditioner is compliant with the requirements of the Low Voltage Directive (72/23/EEC), the EMC Directive (89/336/EEC) and the Directive on pressurized equipment (97/23/EEC).
- ◆ The manufacturer shall not be responsible for damage originating from unauthorized changes or the improper connection of electric and hydraulic lines. Failure to comply with these instructions or to comply with the requirements set forth in the "Operating limits" table, included in the manual, shall immediately invalidate the warranty.
- ◆ Do not use the units if damaged. If problems occur, switch the unit off and disconnect it from the power supply.
- ◆ In order to prevent electric shocks, fires or injuries, always stop the unit, disable the protection switch and contact SAMSUNG's technical support if the unit produces smoke, if the power cable is hot or damaged or if the unit is very noisy.
- ◆ Always remember to inspect the unit, electric connections, refrigerant tubes and protections regularly. These operations should be performed by qualified personnel only.
- ◆ The unit contains moving parts, which should always be kept out of the reach of children.
- ◆ Do not attempt to repair, move, alter or reinstall the unit. If performed by unauthorized personnel, these operations may cause electric shocks or fires.
- ◆ Do not place containers with liquids or other objects on the unit.
- ◆ All the materials used for the manufacture and packaging of the air to water heat pump are recyclable.
- ◆ The packing material and exhaust batteries of the remote control(optional) must be disposed of in accordance with current laws.
- ◆ The air to water heat pump contains a refrigerant must be disposed in authorized center or returned to retailer as special wastes.

INSTALLING THE UNIT

IMPORTANT: When installing the unit, always remember to connect first the refrigerant tubes, then the electrical lines. Always disassemble the electric lines before the refrigerant tubes.

- ◆ Upon receipt, inspect the product to verify that it has not been damaged during transport. If the product appears damaged, DO NOT INSTALL it and immediately report the damage to the carrier or retailer (if the installer or the authorized technician has collected the material from the retailer.)
- ◆ After completing the installation, always carry out a functional test and provide the instructions on how to operate the air to water heat pump to the user.
- ◆ Do not use the air to water heat pump in environments with hazardous substances or close to equipment that release free flames to avoid the occurrence of fires, explosions or injuries.

Safety precautions (Continued)

POWER SUPPLY LINE, FUSE OR CIRCUIT BREAKER

- ◆ Always make sure that the power supply is compliant with current safety standards.
Always install the air to water heat pump in compliance with current local safety standards.
- ◆ Always verify that a suitable grounding connection is available.
- ◆ Verify that the voltage and frequency of the power supply comply with the specifications and that the installed power is sufficient to ensure the operation of any other domestic appliance connected to the same electric lines.
- ◆ Always verify that the cut-off and protection switches are suitably dimensioned.
- ◆ Verify that the air to water heat pump is connected to the power supply in accordance with the instructions provided in the wiring diagram included in the manual.
- ◆ Always verify that electric connections (cable entry, section of leads, protections...) are compliant with the electric specifications and with the instructions provided in the wiring scheme. Always verify that all connections comply with the standards applicable to the installation of air to water heat pumps.












CAUTION

- ◆ **Make sure that you earth the cables.**
 - **Do not connect the earth wire to the gas pipe, water pipe, lighting rod or telephone wire.**
If earthing is not complete, electric shock or fire may occur.
- ◆ **Install the circuit breaker.**
 - **If the circuit breaker is not installed, electric shock or fire may occur.**
- ◆ **Make sure that the condensed water dripping from the drain hose runs out properly and safely.**
- ◆ **Install the power cable and communication cable of the indoor and outdoor unit at least 1m away from the electric appliance.**



Product specifications

Accessories

<p>Installation Manual(1)</p> 	<p>User's Manual(1)</p> 	<p>Pattern Sheet(1)</p> 
<p>Service Valve(2)</p> 	<p>Wall Mounting Bracket(1)</p> 	<p>Remote Controller Wire(1x15m) (1)</p> 
<p>Temperature sensor for DHW Tank(1x15m) (1)</p> 	<p>Cover Controller (1)</p> 	<p>Ring band (1)</p> 












Product specifications (Continued)

Specifications

Type		Unit	NH080PHXEA			NH160PHXEA		
Power Source		V/Hz	1P, 230, 50			1P, 230, 50		
Operating Range		°C	0~32			0~32		
Operating Range [Water]	Cool	°C	5~25			5~25		
	Heat	°C	15~55			15~55		
Heating Capacity		kW	6	7	8	11	14	16
Water Pump	Flow rate	kg/min	17.0	20.5	23.0	31.5	40.1	45.9
	E.S.P	kPa	53	51	45	64	59	54
	No of speed	-	High	High	High	High	High	High
	Output	W	180			200		
Heat Exchanger	Type	-	Brazing plate			Brazing plate		
Electric Heater	Input power	kW	2+2			2+4		
	Materials	-	INCOLOY 800			INCOLOY 800		
Pressure relief valve		-	3.0 bar [BSPP male 3/8"]			3.0 bar [BSPP male 3/8"]		
Air-vent valve		inch	BSPP male 1/2"			BSPP male 1/2"		
Flow switch	Set Point	LPM	12 ± 1.5			16 ± 1.5		
Expansion vessel	Volume	Liter	8.0			8.0		
	Pre-charge	bar	1.0			1.0		
Dimensions	Net(HxWxD)	mm	850 x 510 x 315 (1024 x 426 x 564)			850 x 510 x 315 (1024 x 426 x 564)		
Weight	Net	kg	45			48		
	Gross	kg	55			58		
Connecting Pipe[Refrigerant]	Liquid/Gas	inch	3/8", 5/8"			3/8", 5/8"		
Connecting Pipe[Water]	Inlet/Outlet	inch	BSPP male 1 1/4"			BSPP male 1 1/4"		



Components interchangeability

Indoor unit	Duct			Wall mounted		Air to Water unit	Remark
							
Subsidiary materials	Slim Duct	Vivace	Neo-Forte	Hydro Unit			
Capacity	2.2~5.6kW	2.2~7.1kW	2.2~7.1kW	8/16kW			
EEV Kit  EEV kit for 2/3 room	-	MXD-A13K116A MXD-A13K200A MXD-A16K200A MXD-A13K216A MXD-A13K300A MXD-A16K231A MXD-A16K300A	≤3.6kW 1room + ≥5.6kW 1room ≤3.6kW x 2room ≥5.6kW x 2room ≤3.6kW 2room + ≥5.6kW 1room ≤3.6kW x 3room ≤3.6kW 1room + ≥5.6kW 2room ≥5.6kW 3room	-		-	Requisite
Y-joint 	MXJ-YA1509K (≤15.0kW and below)					-	Requisite
Drain Pump 	MDP-E075SEE3 (Option)	-	-	-	-	-	
Wireless remote controller 	MR-BH01 (Option)	ARH-1364 (Included)	ARH-465 (Included)	-		-	
Remote controller receive kit 	MRK-A00 (Option)	-	-	-		-	
Wired remote controller 	MWR-TH01 MWR-WS00 MWR-SH00 (Option)	-	-	-		Included	
Domestic Hot Water tank  DHW tank	-	-	-	-		Standard: NH200WHXEA/ NH300WHXEA Solar: NH200WHXES/ NH300WHXES	Option

- ◆ Subsidiary materials are compatible with CAC, DVM and FJM products.
- ◆ Components listed above are interchangeable only for Slim Duct, Vivace, Neo-Forte and Hydro unit.
- ◆ Install distribution kit for 1, 2 or 3 rooms on the ceiling or outdoor area.
- ◆ A2W: Air to Water
A2A: Air to Air



Typical application examples




When the SAMSUNG Air-to-Water Heat Pump system is used in series with another heat source (e.g. gas boiler). Ensure that the return water temperature not exceed 55°C. SAMSUNG shall not be held liable for any damage resulting from not observing this rule.


* The below examples are for illustration purposes only.

Application 1: TDM(Time Division Multi)

- ◆ Air-to-Water: Water Heating & Space Heating
- ◆ Air-to-Air: Space Heating & Space Cooling

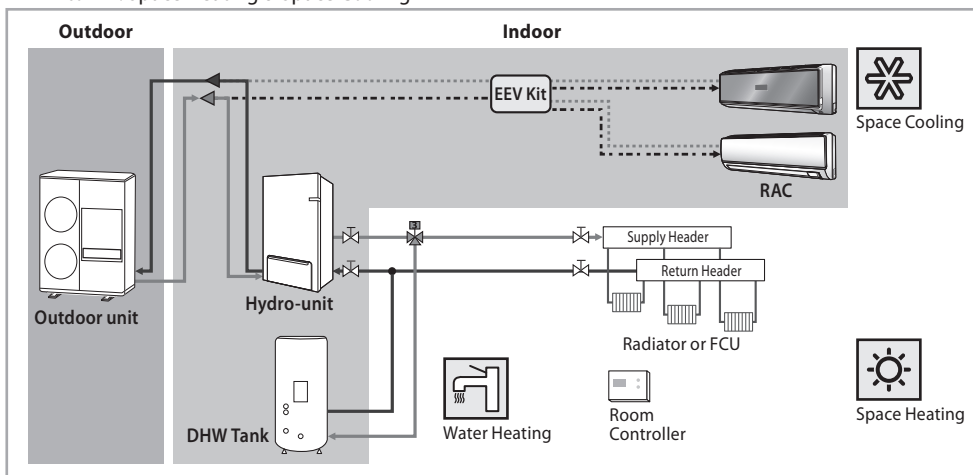


Application 2: Space heating

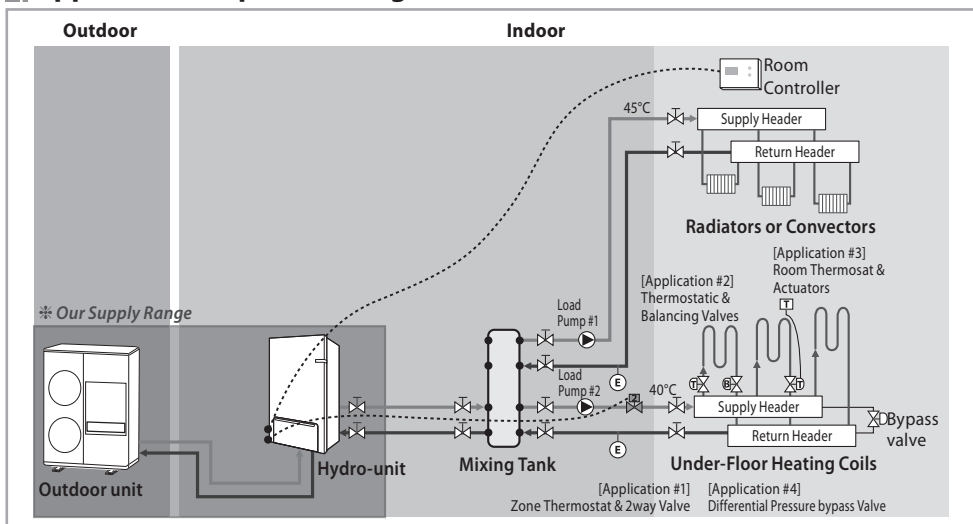





Application 3: Space heating + water heating

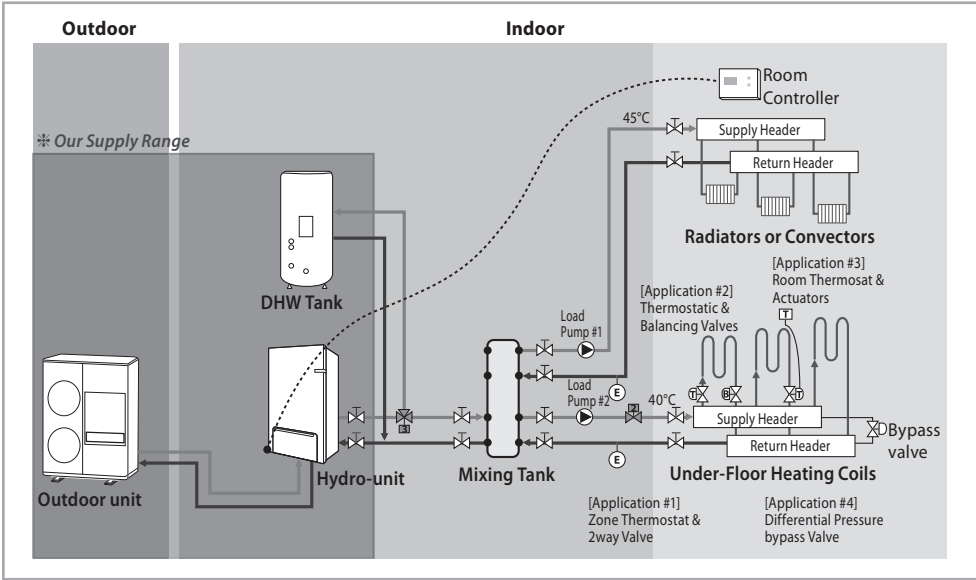

Application 4: Hybrid application(backup boiler and solar panel connected)

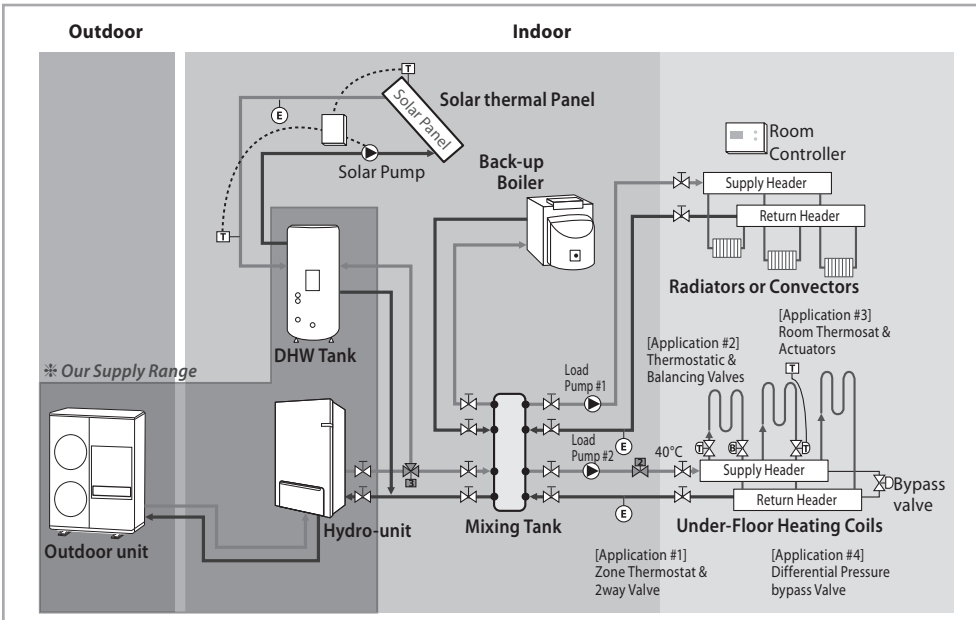


Main components

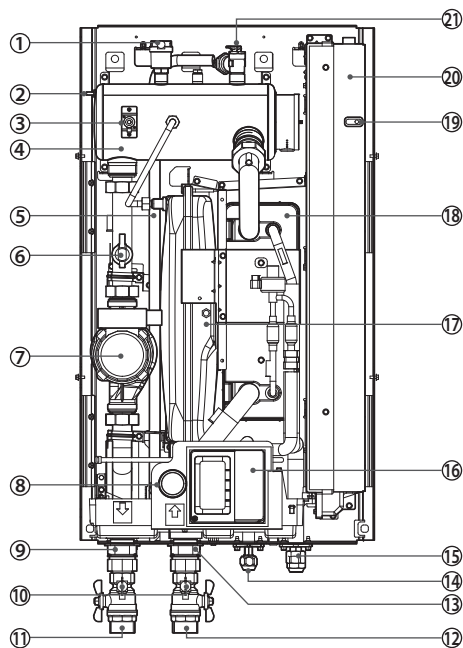

No.	Name	Note
①	Air vent 3/8"	BSPP male 3/8"
②	Backup heater thermal fuse	Thermal cut out 94°C (+0, -6°C)
③	Backup heater thermostat	Disc. 65°C ±4°C
④	Backup Heater Element	Incoloy 800, 4/6kW, 230V AC 50Hz
⑤	Drain Hose	
⑥	Flow switch	12/16LPM ±1.5LPM
⑦	Water pump	1P-230V-50Hz, 46LPM x 54kPa
⑧	Manometer	ø48, 0~4 bar
⑨	Water outlet pipe	BSPP male, 1-1/4"
⑩	Drain valves	
⑪	Service valve(L)	BSPP male, 1-1/4"
⑫	Service valve(R)	BSPP male, 1-1/4"
⑬	Water inlet pipe	BSPP male, 1-1/4"
⑭	Refrigerant pipe	ø9.52(3/8")
⑮	Refrigerant pipe	ø15.88(5/8")
⑯	Wire for controller	length 15m
⑰	Expansion Vessel	8 Liter, Pre-charge gas : 0.1 MPa, N2, BSPP male, 3/8"
⑱	LED display	
⑳	Control box	
㉑	Pressure relief valve	0.3 MPa, BSPP 1/2"



Functional diagram

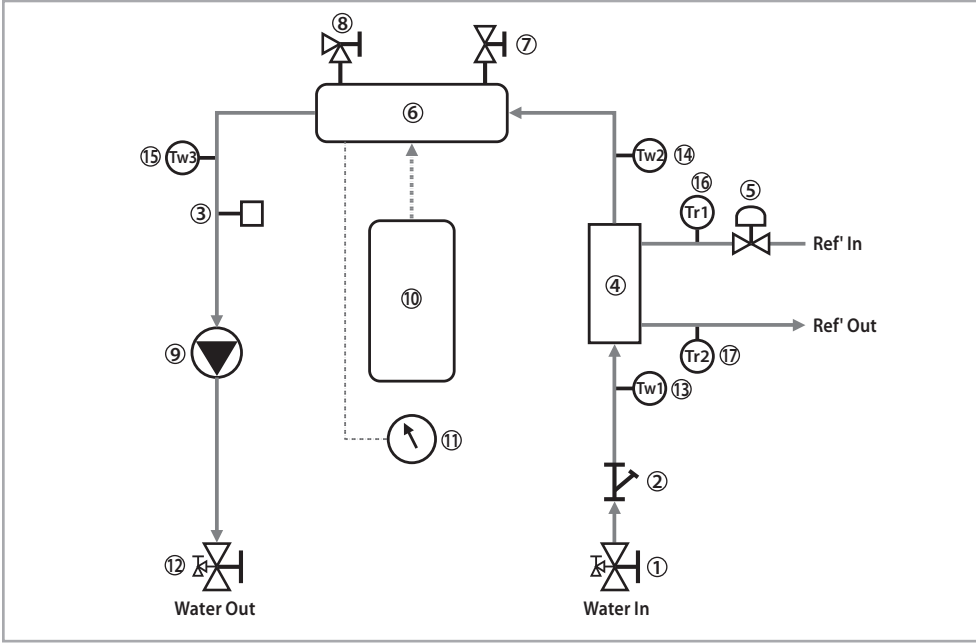


No.	Note
①	Service valve(R)
②	Strainer
③	Flow switch
④	Heat exchanger
⑤	EEV kit
⑥	Backup heater
⑦	Pressure relief valve
⑧	Air-vent valve
⑨	Water pump
⑩	Expansion tank
⑪	Manometer
⑫	Service valve(L)
⑬	Water temp. sensor 1
⑭	Water temp. sensor 2
⑮	Water temp. sensor 3
⑯	Refrigerant temp. sensor 1
⑰	Refrigerant temp. sensor 2





Dimensional drawing

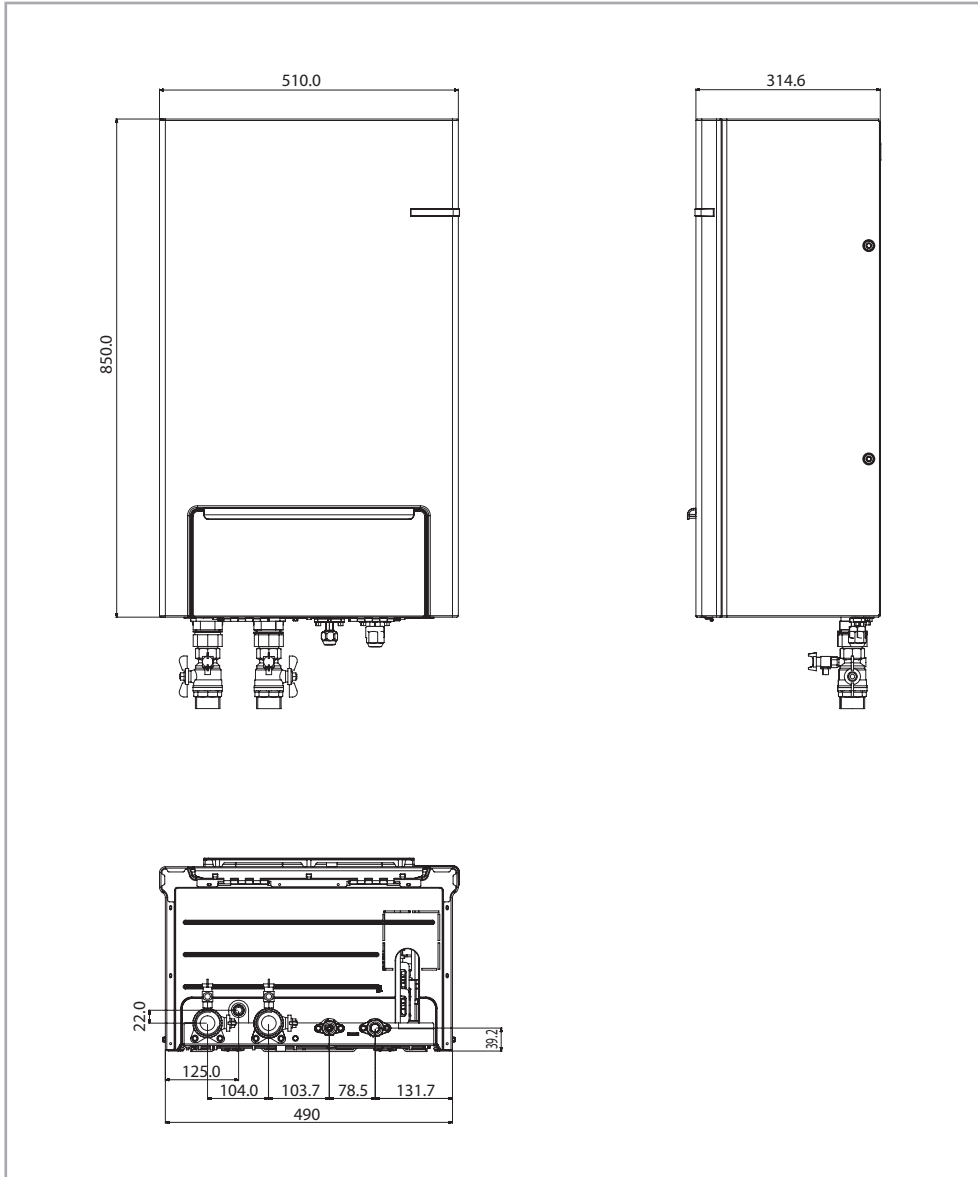



Installing the unit


Installation of the indoor unit

The indoor unit should be installed indoors and meet the following conditions.


- ◆ Installation site should be sheltered from frost.
- ◆ In area with suitable space for servicing.
- ◆ A place with adequate ventilation.
- ◆ Where there is no risk of leakage of flammable gases.
- ◆ There is a provision for condensate drain and pressure relief valve blow-off.
- ◆ The wall for installation is a flat, vertical and non-combustible wall, capable of supporting the operation weight of the unit.

Installation space

- ◆ Ensure to leave the appropriate space as indicated in the drawing.
- ◆ Installation site should be secured with adequate ventilation so that the components of hydro unit will not be damaged from overheating.

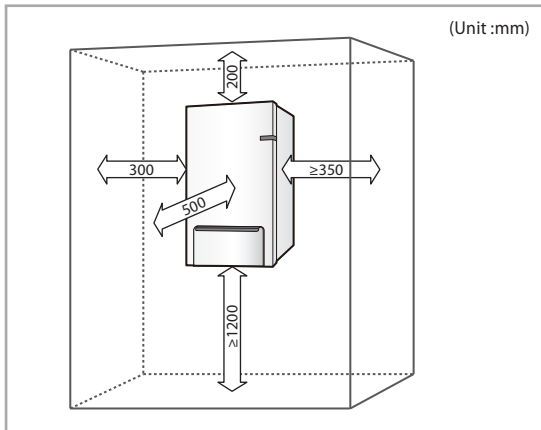


- ◆ Before installing the indoor unit, fix the pattern sheet on the wall. This sheet has a function to take correct position for the wall mounting bracket and screws.

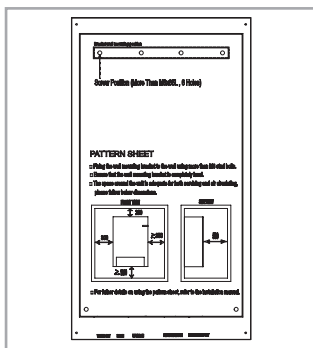


Installing the unit (Continued)

Mounting the indoor unit

※ A minimum of two people should lift the unit by the handles and not by the drain pan or pipe work.

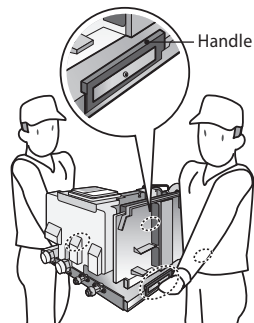

- ◆ Drill 6 holes from the pattern sheet for fixing the wall bracket and unit. After completing holes, detach the pattern sheet.
- ◆ Fix the wall-mount-bracket to the wall using appropriate plugs and screws(Use over M8 6 screws).
- ◆ Hang the indoor unit on an wall-mount-bracket and fix a front cabinet on the unit by using 4 screws.

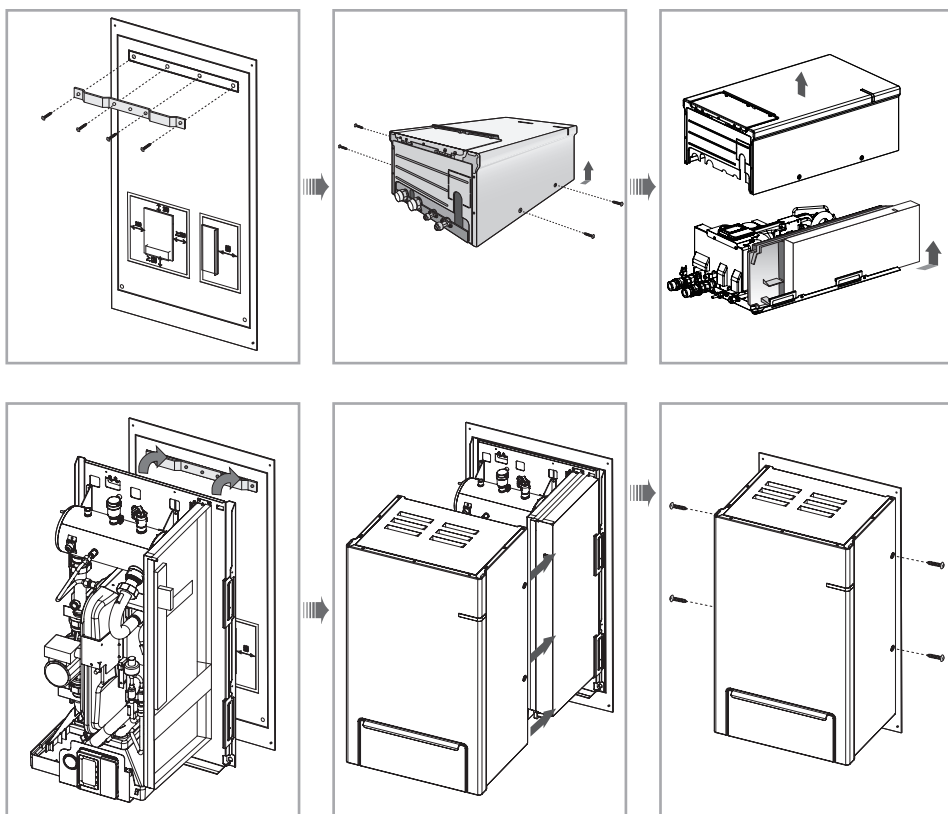


• Fix screw through base panel of the unit.

Pipe work

Refrigerant pipe work


For all guide lines, specifications regarding refrigerant pipe work between the indoor unit and the outdoor unit, please follow the outdoor unit installation manual.

	Gas pipe (O.D.)	Liquid pipe (O.D.)	Tightening Torque	Final Torque
Indoor unit	15.9mm(5/8 inch)	9.5mm(3/8 inch)	400kg-cm	450kg-cm
Outdoor unit	15.9mm(5/8 inch)	9.5mm(3/8 inch)	700 kg-cm	750kg-cm

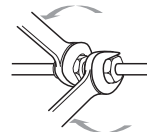

CAUTION

When connecting the refrigerant pipes, always use 2 wrenches/spanners for tightening or loosening nuts. If not, piping connections can be damaged.

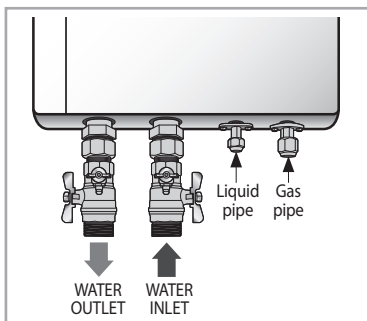

Pipe work (Continued)


Water pipe work

The hydro unit is equipped with components listed on the table below.

The hot and cold water supply connections are clearly marked on the unit with labels. And service valves are provided.

Whole water plumbing system including Hydro unit shall be installed by a qualified technician and must comply with all relevant European and national regulations.

- ◆ Allowable water pressure of hydro unit is maximum 3.0 bar.
- ◆ 2 service valves are provided with the Hydro unit. To facilitate service and maintenance work, install R-Type service valve at the water inlet of the hydro unit and L-Type service valve at the water outlet of the hydro unit.
- ◆ An air-vent valve is integrated on the hydro unit.
Please check that air purge valve is not overtightened so the air purge valve can release any air out of the system during system operation.

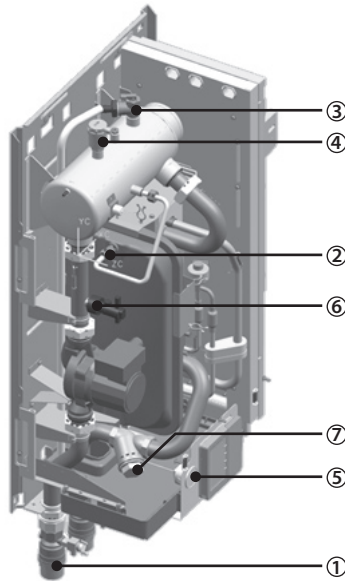

		Name	Tightening Torque	
Hydro unit	①	1.25" BSPP	350~380 kgf·cm	34 ~ 37 N·m
	②	3/8" BSPP	120 ~ 150 kgf·cm	12 ~ 15 N·m
	③	Pressure relief valve	120 ~ 150 kgf·cm	12 ~ 15 N·m
	④	Air-vent valve	120 ~ 150 kgf·cm	12 ~ 15 N·m
	⑤	Manometer	200~230 kgf·cm	19 ~ 23 N·m
	⑥	Flow switch	72~82 kgf·cm	7 ~ 8 N·m
	⑦	Strainer	350~380 kgf·cm	34 ~ 37 N·m



Flushing and air-purging

When filling water, the following start-up procedure should be followed.


1. All system components and pipes must be tested for the presence of leaks.
2. Preparation of a make-up water assembly or Flushing unit is recommended for installation and service.
3. Before connecting pipes to the hydro unit, Flush water pipes clean to remove contaminants during 1 hours using a flushing unit or tap water pressure if it is adequate (at 2 to 3 bar)
4. Fill water into the hydro unit by opening service valves.
5. Purge the air. (Fill with a flushing unit with sufficient capacity: avoid aerating the water)
6. Circulate for long enough to ensure that all air has been bled from the complete water piping system.

After installations, Commissioning should be performed by qualified representatives.

Unless flushing and air-purging works are performed adequately, It might result in malfunctions.



Flushing unit
(or purging cart)

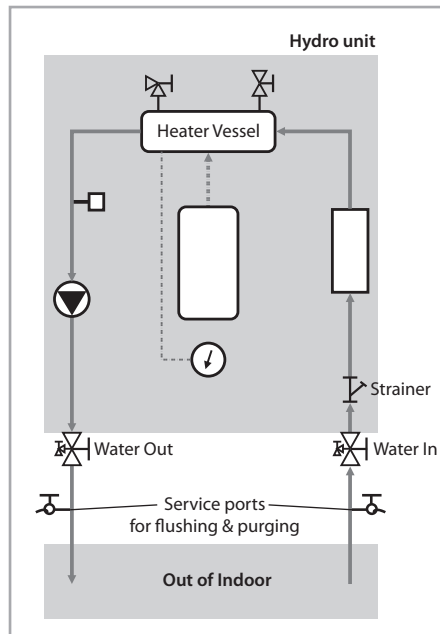

CAUTION


- ◆ **Check and clean strainer periodically.**
- ◆ **Replace strainer when necessary.**
- ◆ **Its recommended that you flush the system for 4 hours minimum once a per annum.**
- ◆ **Use chemical cleaning agents(Begin with acid , finish with alkali).**
- ◆ **Install Air vents on the top of the system**
- ◆ **Pressure of entering water(over 2.0 bar)**




Pipe work (Continued)

The water volume and expansion vessel pressure


The unit is equipped with an expansion vessel of 8 litres which has a default pre-pressure of 1 bar. To ensure correct operation of the unit, the pre-pressure of the expansion vessel might need to be adjusted and the minimum and maximum water volume must be checked.

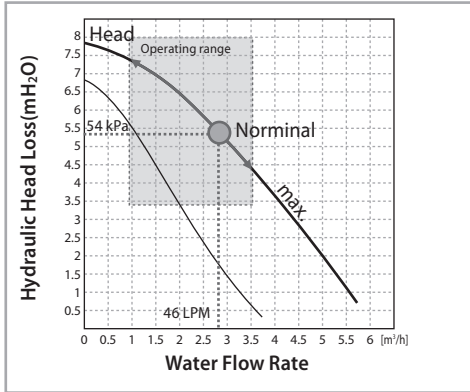

- ◆ To secure enough water flow rate, set water pump speed as "Max".
- ◆ The standard pressure drop of the unit is 30~35 kPa.
- ◆ When it's needed to get additional E.S.P(external pressure drop) according to field piping works, connect additional pumps(RS25/8) on the field piping line in series.

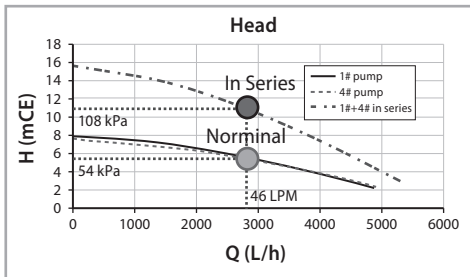

- ◆ If the pressure loss of total system is over 54kPa, additional water pump should be installed in series. Otherwise, the water flow rate might be decreased, causing insufficient heating or cooling.

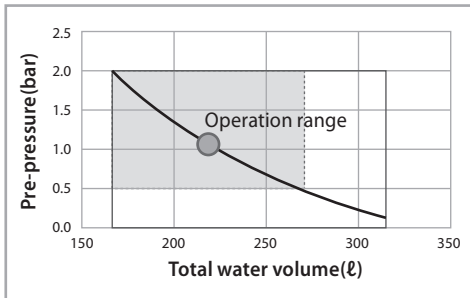


- ◆ Pre-pressure is adjusted by the total water volume.



Setting the pre-pressure of the expansion vessel

When it is required to change the default pre-pressure of the expansion vessel(1 bar), keep in mind the following guidelines:

- ◆ Use only dry nitrogen to set the expansion vessel pre-pressure.
- ◆ Inappropriate setting of the expansion vessel pre-pressure will lead to malfunction of the system. Therefore, the pre-pressure should only be adjusted by a licensed installer.

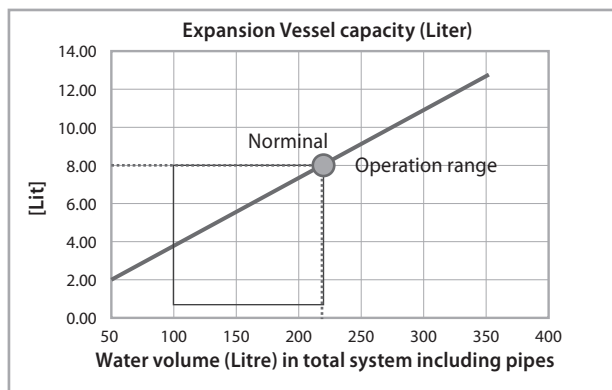

* Water volume of total system for reliable performance is minimum 50 litres.

Installation height difference ^(a)	Water volume	
	< 220 Litres	> 220 Litres
<7m	No pre-pressure adjustment required.	Actions required: <ul style="list-style-type: none"> • Pre-pressure must be decreased, calculate according to "Calculating the pre-pressure of the expansion vessel". • Check if the water volume is lower than maximum allowed water volume
>7m	Actions required: <ul style="list-style-type: none"> • Pre-pressure must be increased, calculate the appropriate value following by "Calculating the pre-pressure of the expansion vessel". • Check if the water volume is lower than maximum allowed water volume 	Expansion vessel of the unit too small for the installation.

(a) Installation height difference: height difference(m) between the highest point of the water circuit and the indoor unit. If the indoor unit is located at the highest point of the installation, the installation height is considered 0m.

Calculating the pre-pressure of the expansion vessel

The pre-pressure(P_g) to be set depends on the maximum installation height difference(H) and is calculated as below:

$$P_g = (H/10 + 0.3) \text{ bar}$$




Pipe work (Continued)

Charging water


After installation is completed the following procedures shall be used to charge water into the hydro unit.

- ◆ Connect water lines to water connections of hydro unit.
- ◆ The air-vent valve shall be opened at least 2 turns and drain valves shall be closed.
- ◆ Open the service valve in the water supply connection.
- ◆ Water pressure of supply line shall be over 2.0 bar for good charging work.
- ◆ Stop water supply when the pressure gauge of hydro unit indicates 2.0 bar.

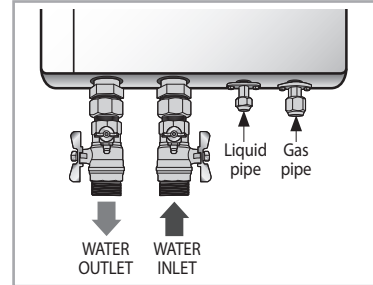

CAUTION

- ◆ **Service space should be secured.**
- ◆ **Water pipe and connections must be cleaned using water.**
- ◆ **If internal water pump capacity is not enough, install external water pump.**
- ◆ **Do not connect electric wire while water charging.**
- ◆ **When initial installation or re-installation required, open the cap to prevent air trap in the unit while charging water.**
- ◆ **The back-up heater vessel shall be full of water before heater is turned on. Confirm if the vessel is empty by opening the pressure relief valve of hydro unit. (OK if water is flowing out)**
- ◆ **It is recommended to install the make-up water assembly to feed small quantities of water to the system automatically, replacing the minor water losses and maintaining the system pressure. This assembly usually consists of a pressure-reducing valve, water filter, check-valve and shut-off valves. In this case, Check-valve must be installed to prevent from contaminating city water.**

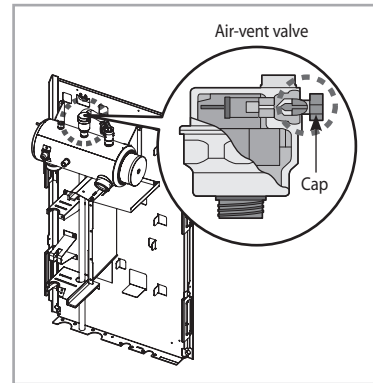



Pressure relief valve

A pressure relief valve is integrated on heater vessel of hydro unit and shall work in abnormal condition for protecting the hydro unit.



- ◆ *The pressure relief valve will operate releasing the pressure by flowing out some water through the drain hose.*
- ◆ *Make certain that the discharged water out of drain pan can not contact any electrical parts.*

Piping insulation


The complete water circuit, including all piping must be insulated to prevent condensation forming on the surface of the pipe and heat loss to external environment.

Wiring work




- ◆ **Field-supplied electrical components such as power switch, circuit breakers, wires, terminal blocks, etc must be properly chosen with compliance with national legislation or regulation.**
- ◆ **Switch off the power supply before making any connections.**
- ◆ **All field wiring and components must be installed by a licensed electrician.**
- ◆ **Use a dedicated power supply.**
- ◆ **All power connections must be protected from dew condensation by thermal insulation.**
- ◆ **The system shall be earthed. Do not earth the unit to a utility pipe, surge absorber or telephone earth. Incomplete earth may cause electrical problems.**

Layout of PCB

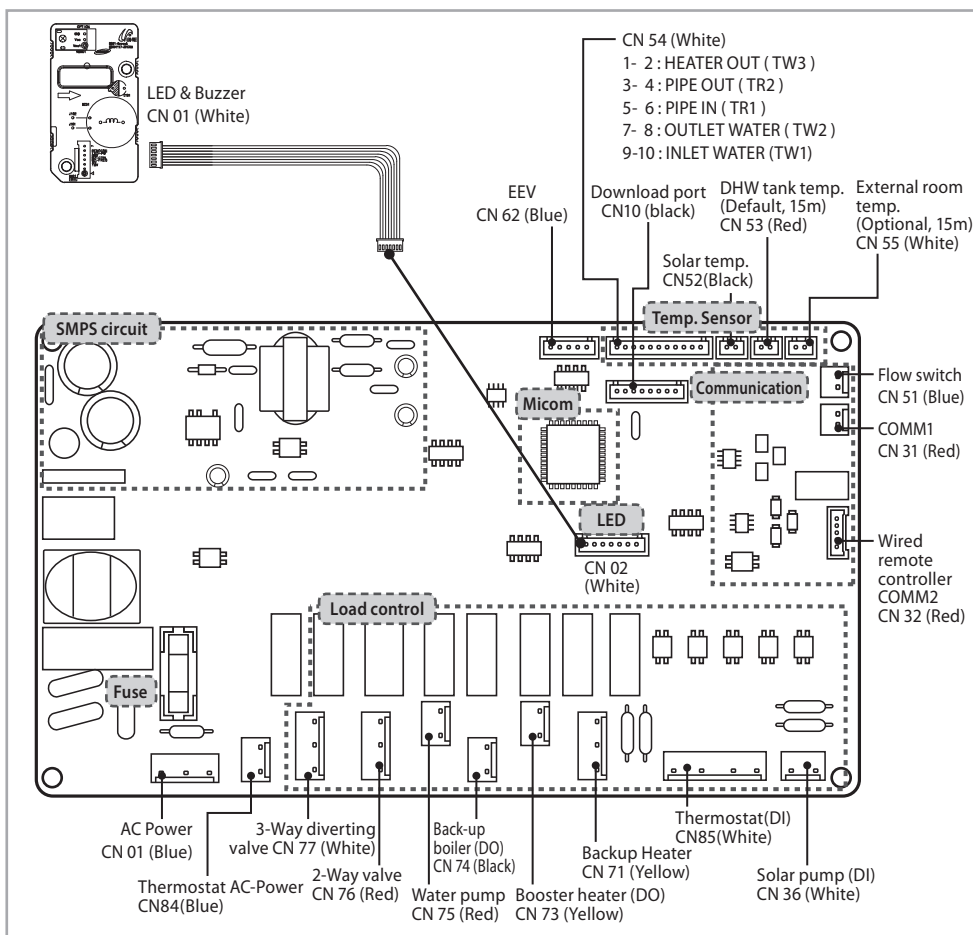

Wiring diagram

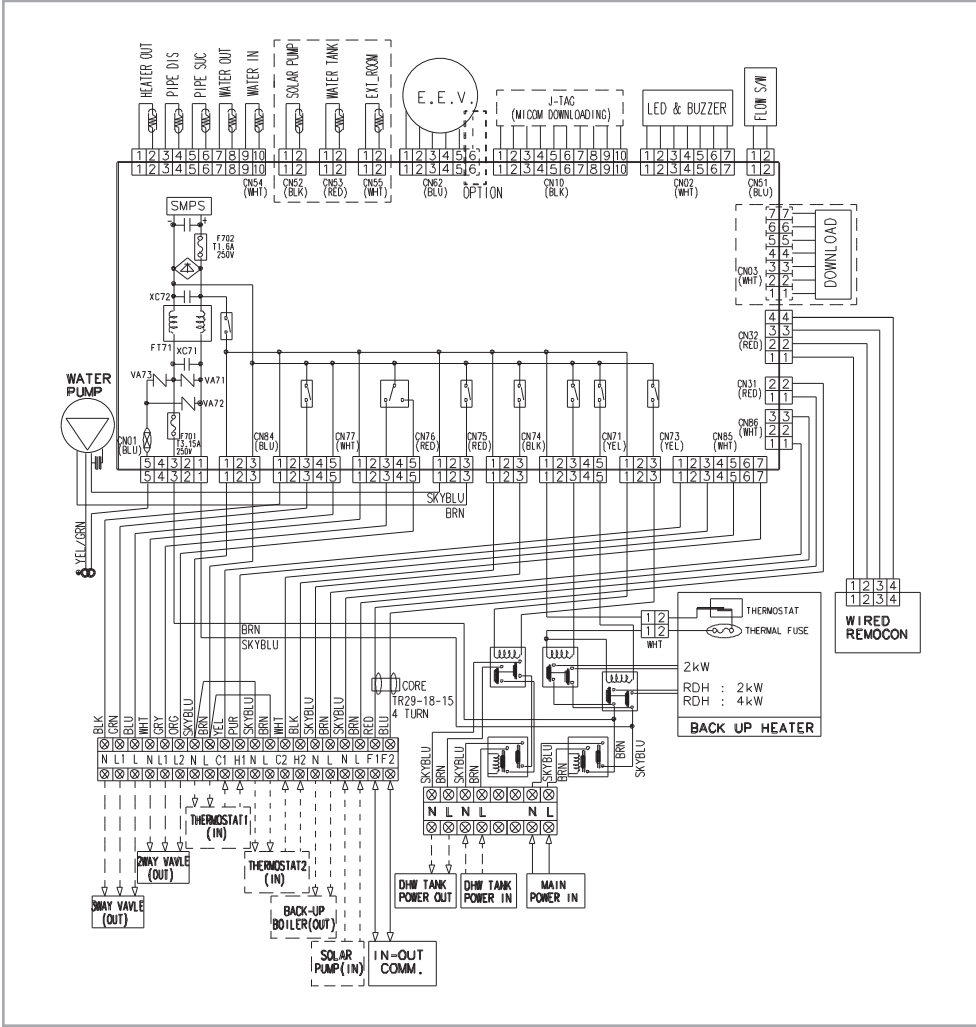


ENGLISH

Wiring work (Continued)


Selecting solderless ring terminal

- ◆ Select a solderless ring terminal of a connecting power cable based on a nominal dimensions for cable.
- ◆ Cover a solderless ring terminal and a connector part of the power cable and then connect it.

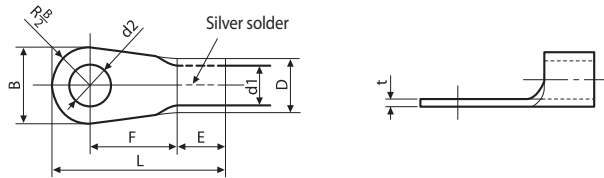

Nominal dimensions for cable (mm ²)	Nominal dimensions for screw (mm)	B		D		d1		E	F	L	d2		t
		Standard dimension (mm)	Allowance (mm)	Standard dimension (mm)	Allowance (mm)	Standard dimension (mm)	Allowance (mm)				Standard dimension (mm)	Allowance (mm)	
4/6	4	9.5	±0.2	5.6	+0.3 -0.2	3.4	±0.2	6	5	20	4.3	+0.2 0	0.9
	8	15							9	28.5	8.4	+0.4 0	
10	8	15	±0.2	7.1	+0.3 -0.2	4.5	±0.2	7.9	9	30	8.4	+0.4 0	1.15
16	8	16	±0.2	9	+0.3 -0.2	5.8	±0.2	9.5	13	33	8.4	+0.4 0	1.45
25	8	12	±0.3	11.5	+0.5 -0.2	7.7	±0.2	11	15	34	8.4	+0.4 0	1.7
	8	16.5							13		8.4		
35	8	16	±0.3	13.3	+0.5 -0.2	9.4	±0.2	12.5	13	38	8.4	+0.4 0	1.8
	8	22							13		43		
50	8	22	±0.3	13.5	+0.5 -0.2	11.4	±0.3	17.5	14	50	8.4	+0.4 0	1.8
70	8	24	±0.4	17.5	+0.5 -0.4	13.3	±0.4	18.5	20	51	8.4	+0.4 0	2.0

Torque requirements

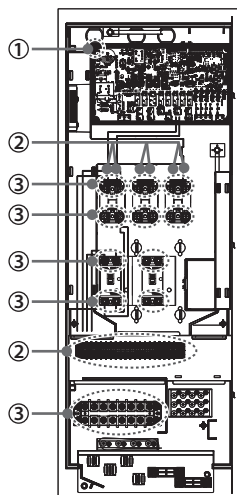

#	Tightening Torque	
①	7~9 kgf·m	68 ~ 88 N·m
②	11~12 kgf·m	107 ~ 117 N·m
③	13~15 kgf·m	127 ~ 147 N·m



Types of allowable current

Conductors of supply cord shall have a nominal cross-sectional area not less than that shown in the table below.

Minimum cross-sectional area of conductors

Rated current of appliance (A)	Nominal cross-sectional area (mm ²)
≤0.2	Tinsel cord ^a
≤0.2 and ≤3	0.5 ^a
>3 and ≤6	0.75
>6 and ≤10	1.0(0.75) ^b
>10 and ≤16	1.5(1.0) ^b
>16 and ≤25	2.5
>25 and ≤32	4
>32 and ≤40	6
>40 and ≤63	10

a: These cords may only be used if their length does not exceed 2m between the point where the cord or cord guard enters the appliance and the entry to the plug.

b: Cords having the cross-sectional areas indicated in the parentheses may be used for portable appliances if their length does not exceed 2m.

Grounding work

◆ Grounding must be done by a qualified installer for your safety.

Grounding the power cable

- The standard of grounding may vary according to the rated voltage and installation place of a heating pump.
- Ground the power cable according to the following.

Installation place Power condition	High humidity	Average humidity	Low humidity
	Electrical potential of lower than 150V		Perform the grounding work 3. ^{Note 1)}
Electrical potential of higher than 150V		Must perform the grounding work 3. ^{Note 1)} (In case of installing circuit breaker)	

* Note 1) Grounding work 3

- ◆ Grounding must be done by your installation specialist.
- ◆ Check if the grounding resistance is lower than 100Ω.
When installing a circuit breaker that can cut the electric circuit in case of a short circuit, the allowable grounding resistance can be 30~500Ω.

Note 2) Grounding at dry place

- ◆ The grounding resistance is should be lower than 100Ω.
(It should not be higher than 250Ω)




Wiring work (Continued)


Connection of the power supply and communication cable

Description	No. of wires	Max. A	Thickness	Supply Scope
Main power	2+ground	32A	4.0mm ² H05RN-F or H07RN-F	Field supply (230V~, Input)
Communication	2	6A	0.75mm ² H05RN-F or H07RN-F	7Vdc data


2 wires for communication cable, 1 phase 3 wires(230V ~) for power supply

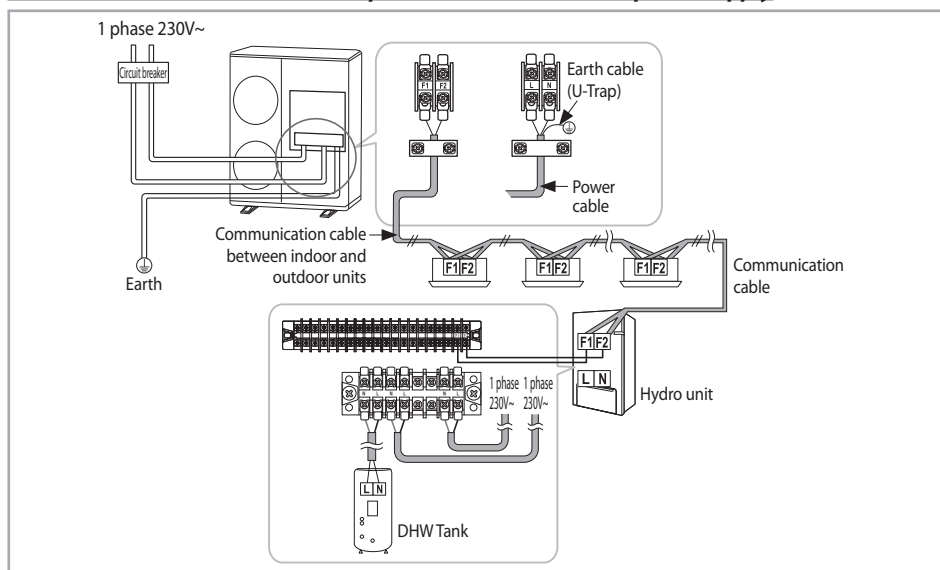

Communication cable connection

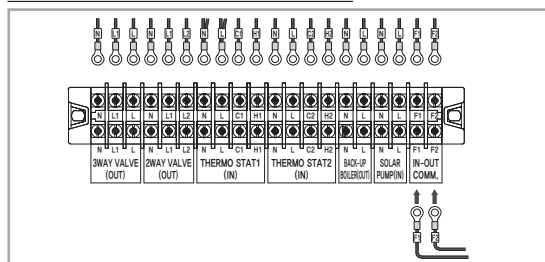

Power wire connection

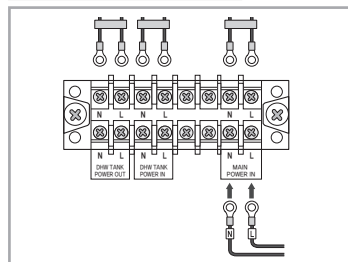


- ◆ If the supply cable is damaged, it must be replaced by a special cable or assembly available from the manufacturer or installer.
- ◆ Circuit Breaker (ELCB, ELB, MCCB etc.) for outdoor and indoor units shall be installed by installers because they are not sub-parts in the units. But you don't need to install for hydro unit (Built-in ELCB).

※ ELCB : Earth leakage circuit breaker
 ELB : Earth leakage breaker
 MCCB : Molded case circuit breaker



Connecting the power terminal

- ◆ Connect the cables to the terminal board using the solderless ring terminal.
- ◆ Use certified and reliable cables.
- ◆ Connect the cables with the torque chart as below.
- ◆ If the terminal is loose, fire may occur caused by arc.
If the terminal is connected too firmly, the terminal may be damaged.
- ◆ External force should not be applied to the terminal block and wires.
- ◆ The cable ties to fasten the wire should be an incombustible material, V0 or above.
(The cable ties should be used to fasten the power wire and they are supplied with the unit.)

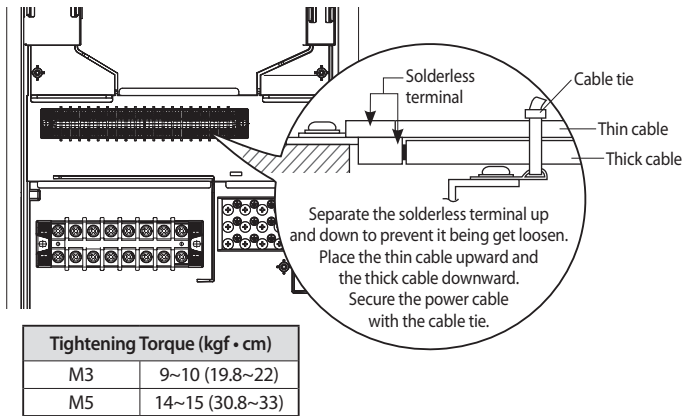


- ◆ How to set address of each unit
 - Address of hydro unit has been set to "0" from the factory.
 - Address of each indoor units shall be set to from 1 to 4 except "0" in accordance with the number of outdoor units.



ex) #1



#2



#3



Wiring work (Continued)

Connection of the backup heater power supply



CAUTION

Do not use a power supply shared by other appliances. Each components for outdoor unit, indoor unit, backup heater and booster heater has the dedicated power supply.


Model	Heater capacity (kW)	ELCB capacity (A)
NH080PHXEA	4	30
NH160PHXEA	6	40
DHW tank(200 or 300)	3	20

* Circuit Breaker(ELCB, ELB, MCCB etc.)s written above are already included in the hydro unit.

* ELCB : Earth leakage circuit breaker

ELB : Earth leakage breaker



MCCB : Molded case circuit breaker

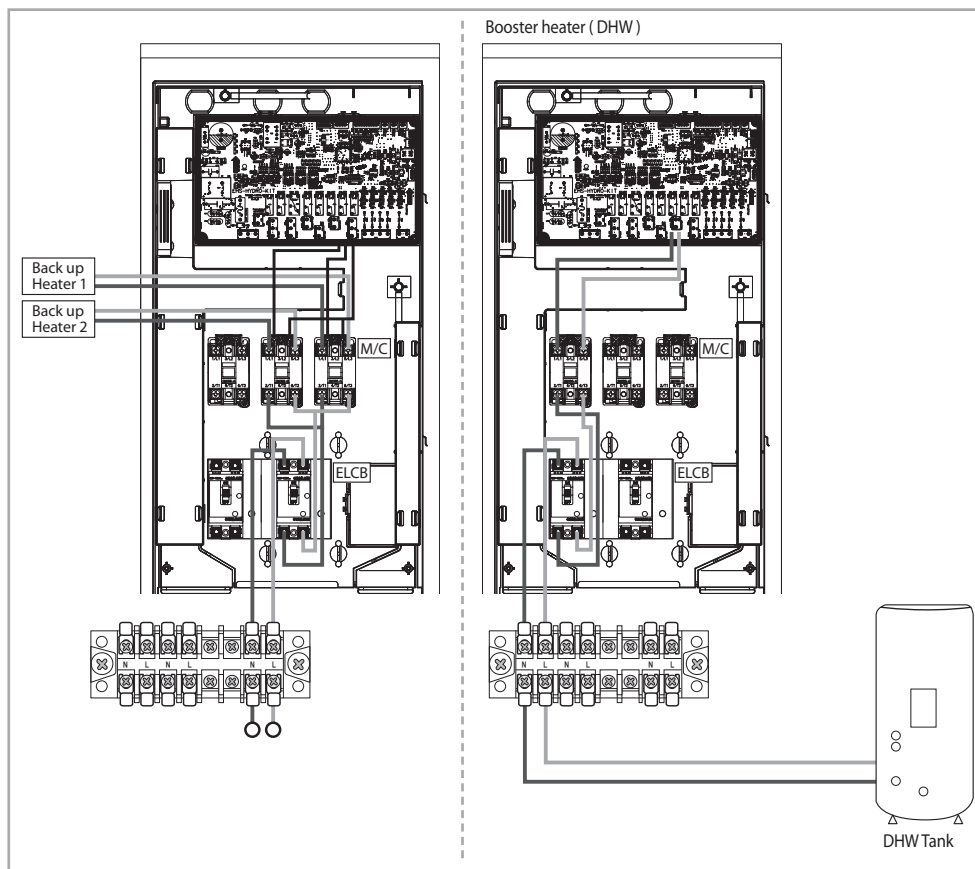



Connection of the thermostat

Description	No. of wires	Max. A	Thickness	Supply Scope
Room Thermostat for weather control	4	22mA	> 0.75mm ²	Field supply (230V~, Input)

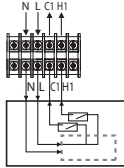

Thermostat
 -Weather controller
 -Changeover
 (Heating and Cooling)
 -230V AC
 -4 wires

Process

1. Before the installation, hydro unit should be turned off.
2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.
3. Make sure what type is you use.
 - Contact signal must be "L".
 ◆ When you install two thermostats, thermostat2 is prior to thermostat1.

Connection of the 2-way valve


Description	No. of wires	Max. A	Thickness	Supply Scope
Motorized 2-way valve to shut off UFH loops during cooling.	2+ground	22mA	> 0.75mm ²	Field supply (230V~, Output)

2-way motorized valve


-When outlet water temperature reach to lower than 16°C in cooling mode, UFH loops will be closed.
 -230V AC
 -2 wires(Normal Open or Normal Close)

Process

1. Before the installation, hydro unit should be turned off.
2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.
3. Make sure what type is you use.
 - Normal OPEN or Normal CLOSED.





* Connection of 2 wires 2-way valve




In case of normal closed type

- When it closes





- When it opens




In case of normal open type

- When it opens



- When it closes



CAUTION

There are 2 types of 2-way valve, normal open type and normal closed type. Make sure to connect terminals to right positions of terminal block. As detailed on the wiring diagram and illustrations above.




Wiring work (Continued)

Connection of the 3-way valve

Description	No. of wires	Max. A	Thickness	Supply Scope
Diverting type 3way valve	4	22mA	0.75mm ² H05RN-F or H07RN-F	Field supply (230V~, Output)

3-way diverting valve for water tank

-Diverting type
-230V AC




When water pass to floor heating

When water pass to water tank

Process

1. Before the installation, hydro unit should be turned off.
2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.
3. Make sure what type of 3 way V/V you use .

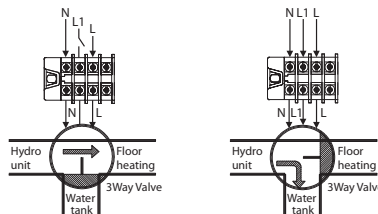

Connection of the back-up boiler

Description	No. of wires	Max. A	Thickness	Supply Scope
Back-up Boiler	2+ground	1 A	0.75mm ² H05RN-F or H07RN-F	Field supply (230V~, Output)


Process

1. Before the installation, hydro unit should be turned off.
2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.
3. Make sure EXT-CTRL signal of back up boiler must be 230Vac.
 - ◆ Do not connect supply power of back up boiler directly.



When it set back up boiler on the hydro unit (relay off)

When it order to back up boiler operates (relay on)

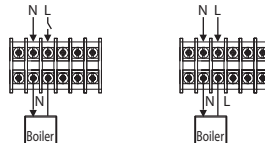

Connection of the solar circulation pump for DHW tank

Description	No. of wires	Max. A	Thickness	Supply Scope
Solar pump	2+ground	1 A	0.75mm ² H05RN-F or H07RN-F	Field supply (230V~, Input)


Process

1. Before the installation, hydro unit should be turned off.
2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.
3. It is for hydro unit to inform that the pump is operating.
4. Solar pump is controlled by installer's handling. And it send the signal to hydro unit depending on solar pump conditions.
 - In operating mode, signal shall be around 230Vac B/W N&L.
 - In non-operating mode, signal shall be around 0Vac B/W N&L.



In non-operating mode, No signal to Hydro unit

In operating mode, On-signal to Hydro unit

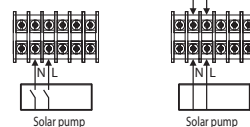



Troubleshooting


If the unit has some problem to work properly, the LED on hydro unit will flash and some error codes will be displayed on the controller.

The following table described the explanation of error codes on the LCD display.

Thermistor

- ◆ Check its resistance. 10kohm@24°C (Hydro unit), 220kohm@24°C (DHW Tank, Solar)
- ◆ Check its location as shown at the diagram.
- ◆ Check its contact status with pipe.
- ◆ Final solution is to change parts

Display	Explanation
122	EVA Inlet thermistor SHORT or OPEN
123	EVA Outlet thermistor SHORT or OPEN
653	Wired remote controller thermistor SHORT or OPEN
654	FRAM Read/Write Error(Wired remote controller data error)
901	Water Inlet thermistor SHORT or OPEN
902	Water Outlet thermistor SHORT or OPEN
903	PHE thermistor SHORT or OPEN
904	Water TANK thermistor SHORT or OPEN

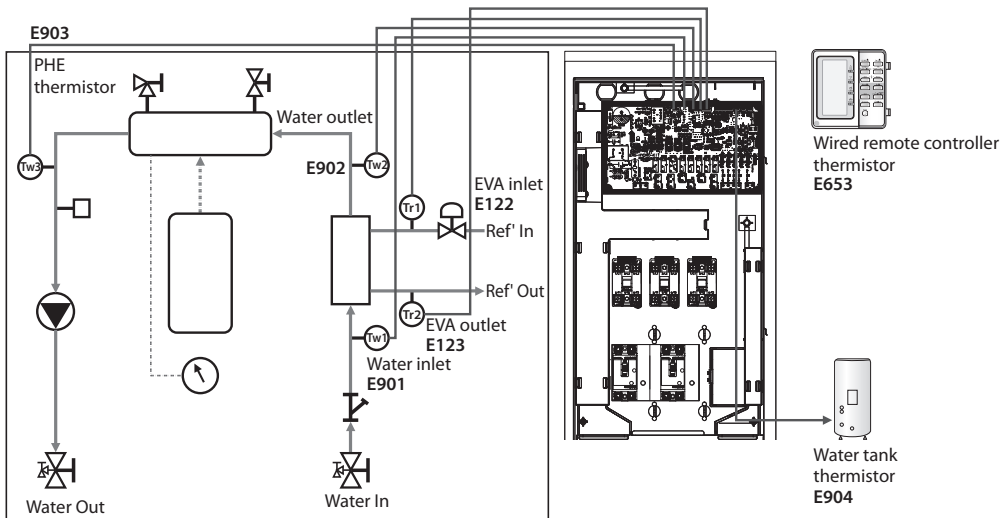


Troubleshooting (Continued)

Communication


Display	Explanation
<i>E01</i>	Abnormal communication B/W Wired remote controller & Hydro unit
<i>E04</i>	Communication tracking error B/W Wired remote controller & Hydro unit
<i>E54</i>	FRAM Read/Write Error(Wired remote controller data error)

E601, E604

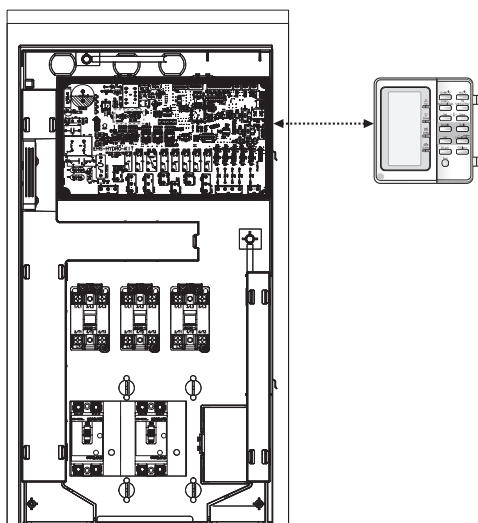

E654


- Wrong data transmit B/W micom & IC07(eeprom)

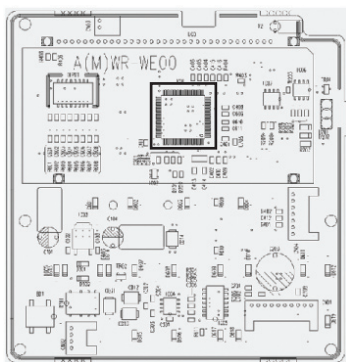




Water pump & flow S/W

Display	Explanation
911	Flow S/W "OFF" error (Condition : Flow switch signal is off during 10seconds when the water pump signal is ON)
912	Flow S/W "ON" error (Condition : Flow switch signal is on during 10seconds when the water pump signal is off)

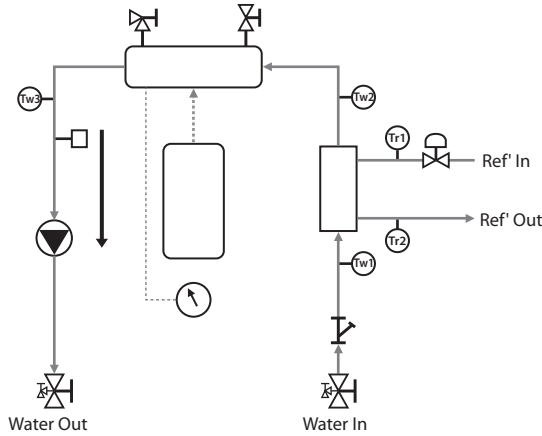


E911

- Water pump ON (Flow S/W off)

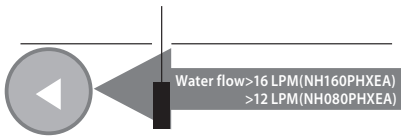


- Water pump ON (Flow S/W off) : NOT enough water flow

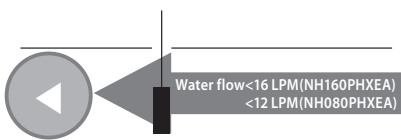

E912

- Water pump OFF (Flow S/W on)

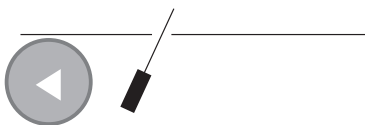

DHW tank

Safety information

(Before installing an DHW Tank, please read this manual thoroughly to ensure that you know how to safely and efficiently install a new appliance.)



WARNING

• If you don't follow the safety precautions, you may get the risk of serious wound or death.

- ◆ The installation must be done by the manufacturer or its service agent or a qualified person in order to avoid a hazard.
 - Installation by an unqualified person may cause a water leakage, electric shock or fire and so on.
- ◆ The electric work must be done by service agent or qualified persons according to national wiring regulations and use only rated cable.
 - Use certified power cable in the market suggested here and do electric work according to installation manual otherwise, electric shock or fire may occur.
- ◆ Install the outdoor unit correctly according to the installation manual.
 - An incorrect installation may cause a water leakage, electric shock or fire and so on.
- ◆ Manufacturer is not responsible for accidents due to incorrect installation.
- ◆ Use certified parts in the market and supplied parts from the factory.
 - All wiring, components and materials to be procured on the site must comply with the applicable local and national codes. If you don't use the certified parts and tools, it can cause trouble to the air conditioner and bring into injury.
- ◆ Install the DHW Tank on a hard and even place that can support its weight.
 - If the place cannot support its weight, the outdoor unit may fall down and it may cause injury.
- ◆ Fix the outdoor unit securely on foundation it can fall over strong wind or earthquake.
 - If the outdoor unit is not properly fixed, it turns over and accidents may occur.
- ◆ Secure power cable with a conduit, which is accessory part for DHW tank, not to be pulled out by external force.
 - If fixing is incomplete, it can cause trouble with a heat generation, electric shock or fire and so on.



General information

- ◆ SAMSUNG Eco Heating system with SAMSUNG DHW tank is designed to withstand SAMSUNG durability and reliability requirements. We cannot guarantee neither good operation nor reliability of total system with other brand tanks.
- ◆ The piping, valves and system configuration of DHW tank system should be followed a relevant local or national regulations.
- ◆ A pressure relief valve in accordance with an opening pressure of max. 0.9MPa should be connected.
- ◆ The electrical box must be opened by a licensed electrician.
- ◆ Switch off the power supply before opening the electrical box lid.
- ◆ Make sure that the installation location of DHW tank system including piping and valves is frost free.




CAUTION

DHW Tank shall be located and installed indoors (garage, multipurpose room, boiler room).

DHW tank (Continued)

Main components

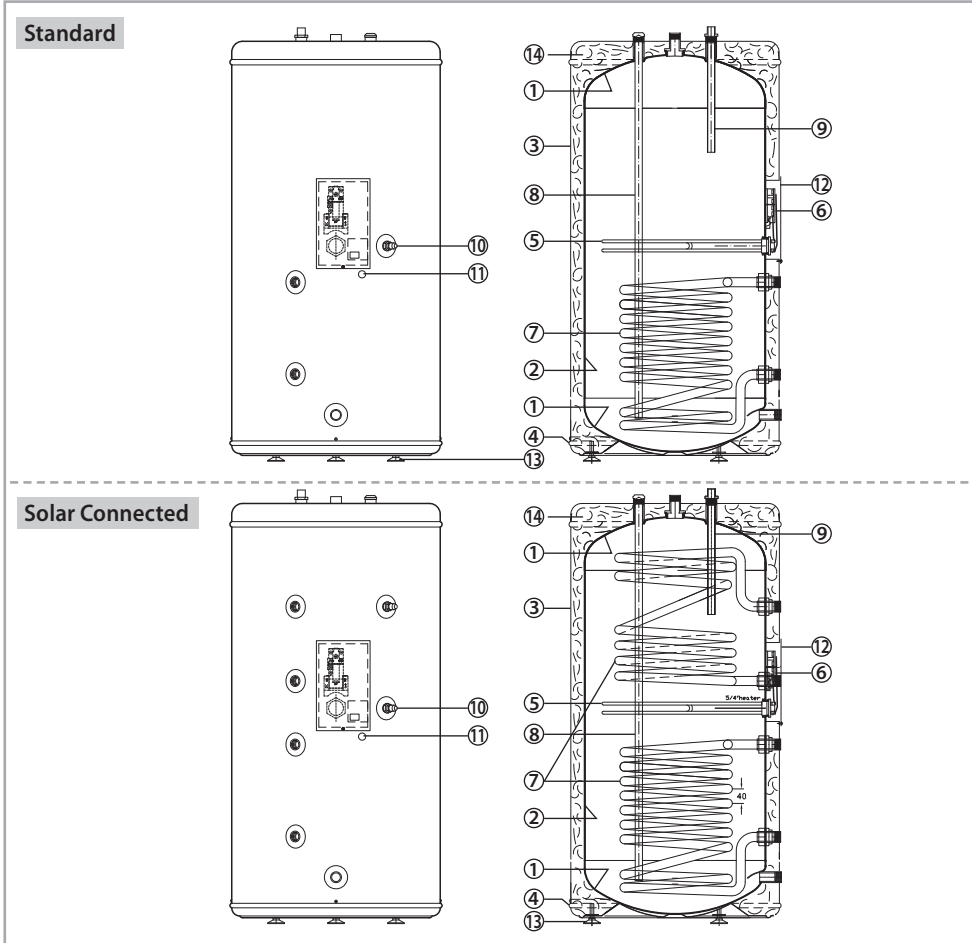


No.	Note
①	Top and bottom dome (pressure vessel)
②	Cylinder (pressure vessel)
③	Outer casing
④	Base
⑤	Heating element 2.6kW,1x240V
	Heating element head
	O-ring for immersion heater
⑥	Thermostat kit
⑦	Heat Exchanger

No.	Note
⑧	Anode 200 ltr
	Anode 300 ltr
⑨	Recirculation dip tube
⑩	Thermistor pocket
⑪	Hole for Conduit/Cable gland
⑫	Electric box lid
⑬	Adjustable feet
⑭	Foam Insulation
⑮	Terminal Block



Outlook diagram

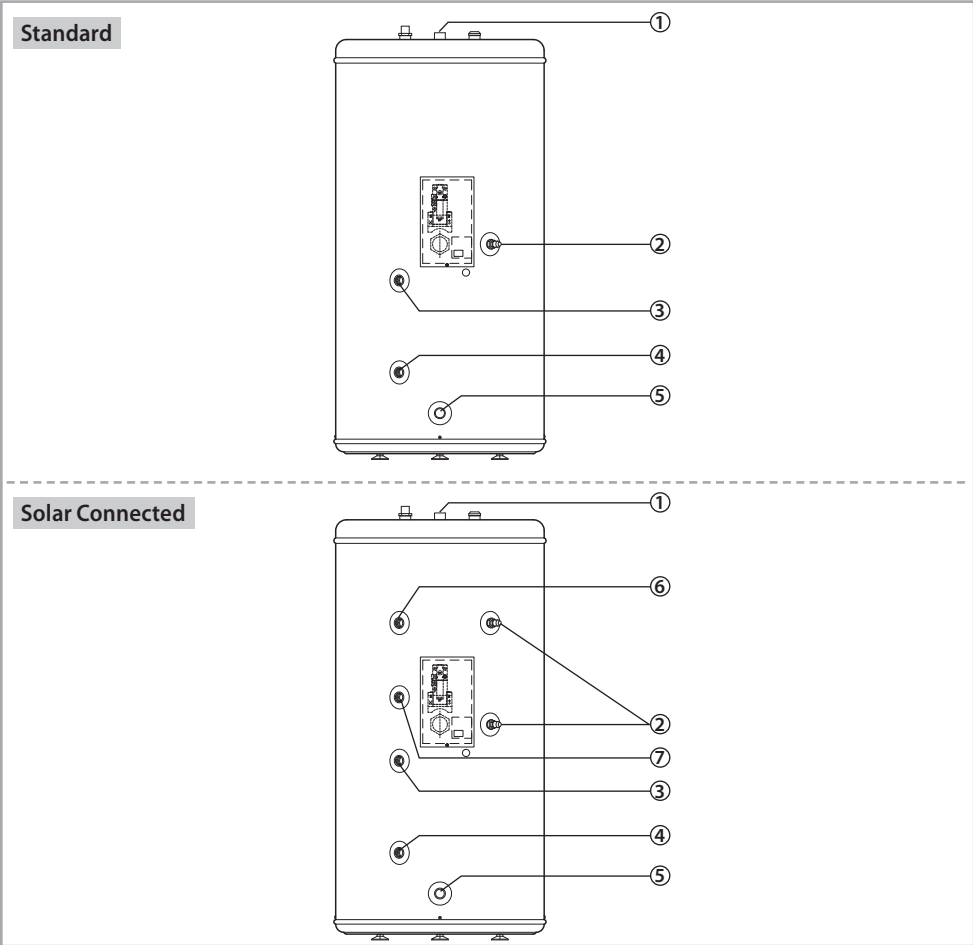




No.	Note
①	Hot water connection
②	Threaded thermistor hole
③	Flow inlet connection
④	Return outlet connection
⑤	Cold water connection
⑥	Flow inlet connection from solar panel
⑦	Flow outlet connection to solar panel





DHW tank (Continued)

Accessories

Leg (3)	Anode bar (1)	Conduit (1)
		





Water tank specifications

Detailed information for the DHW Tank are described in the following table.

There are 4 types of DHW tank by size and operating ways.

		Unit	Standard		Solar Connected	
			NH200WHXE A	NH300WHXE A	NH200WHXE S	NH300WHXE S
Pressure vessel	Material quality		AISI 444 / DIN 1.4521			
	Volume capacity	litres	198	287	198	287
Electric element	Capacity	kW	2.6			
	Material		INCOLOY 825			
	Voltage	V/Hz	1P, 230~, 50			
Heating coil	Material quality		Duplex LDX 2101			
	Heating Area	m ²	0.71			
Heating coil for Solar	Material quality		-	-	Duplex LDX 2101	Duplex LDX 2101
	Heating Area	m ²	-	-	0.47	0.47
Insulation	Material quality		Polyurethane form			
	Thickness	mm	40			
Insulation jacket	Material quality		Epoxy-coated mild steel – white			
Dimensions overall	Diameter	mm	585	585	585	585
	Height	mm	1130	1580	1130	1580
Connections	Cold water inlet	inch	3/4" FBSP			
	Hot water outlet	inch	3/4" FBSP			
	Recirculation	mm	ø22mm straight tube (for compression fitting)			
	Flow & Return	mm	2 x 3/4" female			
	Sensor pocket(s)	mm	ø8.05 mm inside, 1/2" thread			
Weight	Overall	kg	47	61	51	65
Max. Water temperature		°C	70			
Other	Packaging		Eco Foam - PUF			
	Adjustable legs	pcs	3			




DHW tank (Continued)

Space requirements

Positions of water inlet and outlet pipe are affected by the layout of DHW Tank.
 The layout of pipes and other components except DHW tank are the responsibility of installers.
 The DHW Tank must be laid out in accordance with the illustrations as below to prevent any water leakage and malfunction.

◆ Observe the clearances and dimensions as seen below during installing the water tank.

- Note*
- ◆ The installation space mentioned above is minimum suggested clearance.
 - ◆ To secure enough service space and performance of system, take account of more sufficient space.
 - ◆ Be sure to install unit in a place strong enough to withstand its weight.
 [Total weight 365 kg, Tank(65 kg), Water(300 kg)]

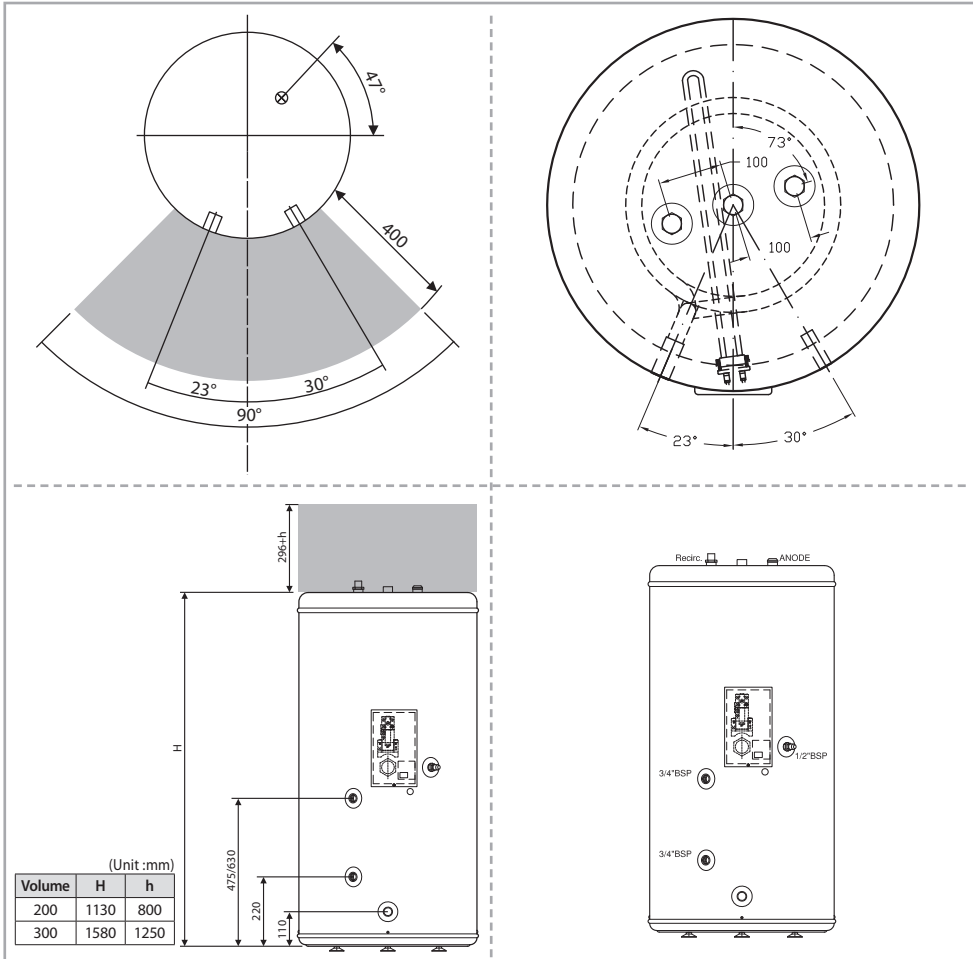




Piping diagram




The product must be installed without any water leakage. Please verify that the DHW tank and other components are properly installed and reinstall them if necessary.

- Use certified components and the correct tools.
- Keep adequate space for the installing.

OVERVIEW

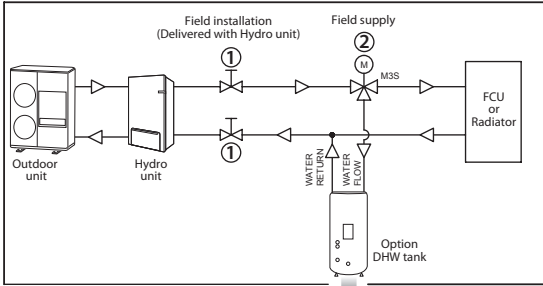

OPTION SANITARY WARM WATER TANK

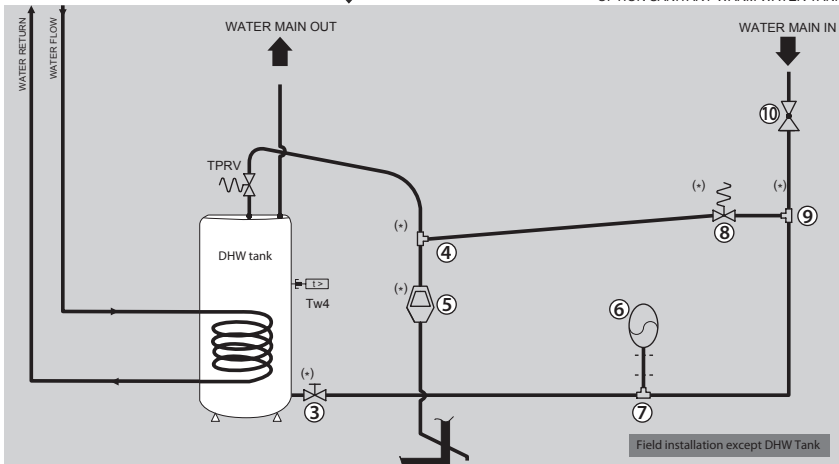

No.	Note
①	Service valve
②	3 way diverting valve
③	Drain valve
④	T-Joint
⑤	Tundish
⑥	Expansion vessel
⑦	T-Joint
⑧	Expansion relief valve
⑨	T-Joint
⑩	Pressure reducing valve with integrated check valve and strainer
TW4	Temperature sensor for DHW tank

* The table above contains the different components of the functional diagrams.





DHW tank (Continued)

System configuration

- ◆ For the reliable performance and durability, all parts as listed below, including a relief valve, an expansion vessel, a drain valve and pressure reducing valve, should be installed according to each national or regional standards. They are not supplied by SAMSUNG.
 - Pressure relief valve (9 bar)
 - Expansion vessel (pre-charge pressure = 8 bar)
 - Drain valve (manual type)
 - Tundish
 - Expansion relief valve
 - Pressure reducing valve
- ◆ Screw the thermistor socket in the foreseen threaded thermistor hole in the tank, use a thread sealant such as Teflon or similar to make water tight.
- ◆ Apply contact glue to the thermistor and insert the thermistor as deep as possible in the thermistor socket. Fix using the nut provided.





Wiring diagram




CAUTION

- ◆ Turn on the DHW tank and hydro unit after completing electric wiring works.
- ◆ Do not disassemble the wirings out of the unit while the unit is operating.
- ◆ Circuit breaker shall be installed for safety and maintenance .

Make sure of a earthing.

- ◆ Do not connect the earth wire to the gas pipe, water pipe, lighting rod or telephone wire.
If earthing is incomplete, electric shock or fire may occur.

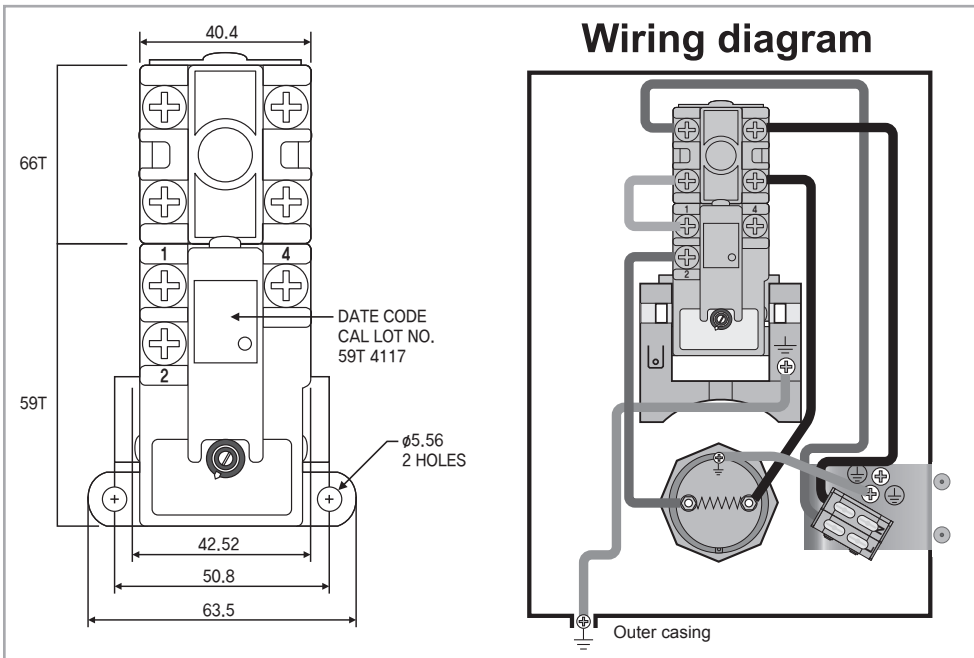

Electrical connections – Technical Data:

Electric element:

2.6 kW 230V 1 phase, 1 1/4" connection with O-ring seal

Adjustable: Electric output can be reduced by cutting one bridge on the element.

Thermostat: Adjustable 40~70°C (preset 60°C)

Safety cut-off: 98°C

Electric central:


Internally connected from factory. Splash proof IP21.

For installation in sanitary rooms special regulations apply.



DHW tank (Continued)

Switch box layout

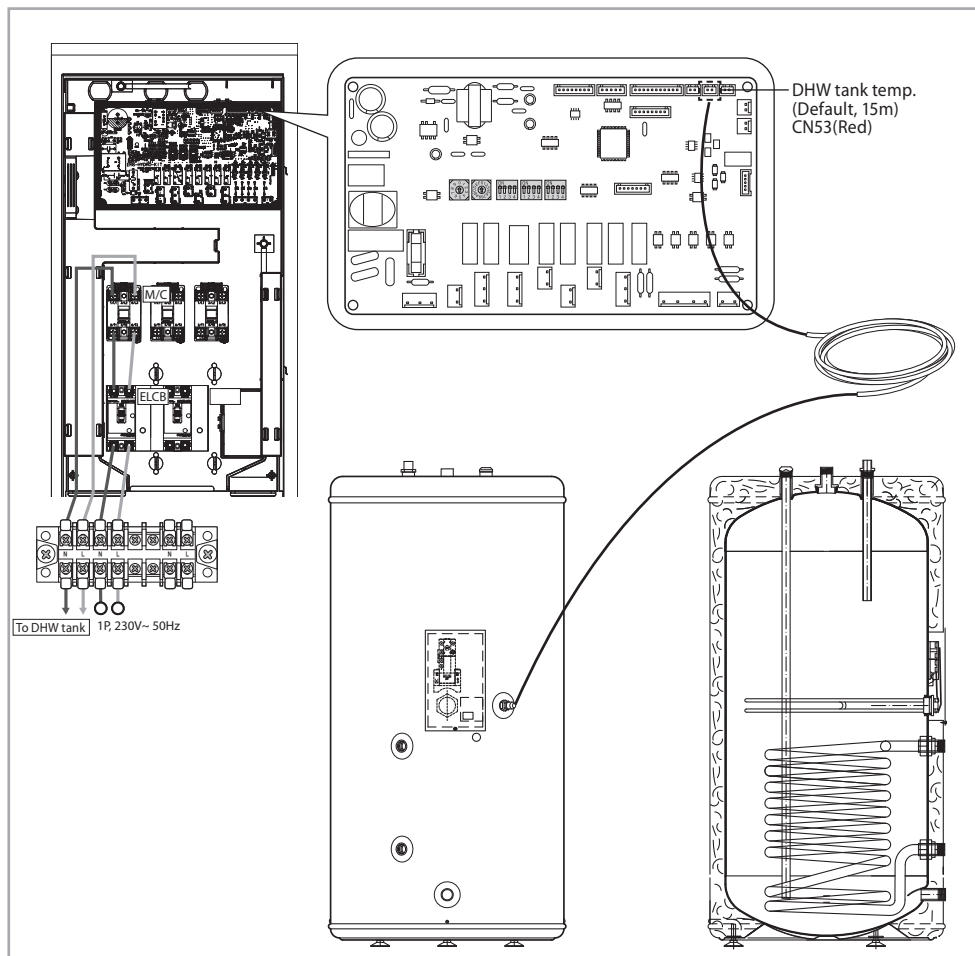



Electrical connections

Procedure



WARNING

- ◆ **Switch off the power supply before making any connections.**
- ◆ **Use a thermal grease in thermistor pocket after installing electric connections.**

Connections to be made in the electrical box of DHW tank

1. Connect the booster heater power supply and thermal protection cable.
2. Make sure to ensure strain relief of the cable.

Connections to be made in the electrical box of indoor units

3. Mount the prewired contactor (K3M) and circuit breaker (F2B). The contactor should be fixed with the two screws supplied.
4. Connect the loose ends of the contactor to terminal 7 and 8 on the terminal block and the connector in the socket X13A on the PCB.
5. Plug the thermistor cable connector in the socket X9A on the PCB.
6. Connect the booster heater power supply and thermal protection cable (field supply) to terminal 7, 8, 21, 22 and earth on the terminal block.
7. Connect the booster heater power supply cable to the circuit breaker (F2B) and earthing screw.
8. Fix the cables to the cable tie mountings with cable ties to ensure strain relief.
9. Set DIP switch SS2-2 on the PCB to ON.




CAUTION

It is of great importance that the heater is filled with water before the electricity is hooked up, or else- the warranty is not valid. If the heater is installed and not used, it must be flushed with water once a week.

DHW tank (Continued)

Power connection

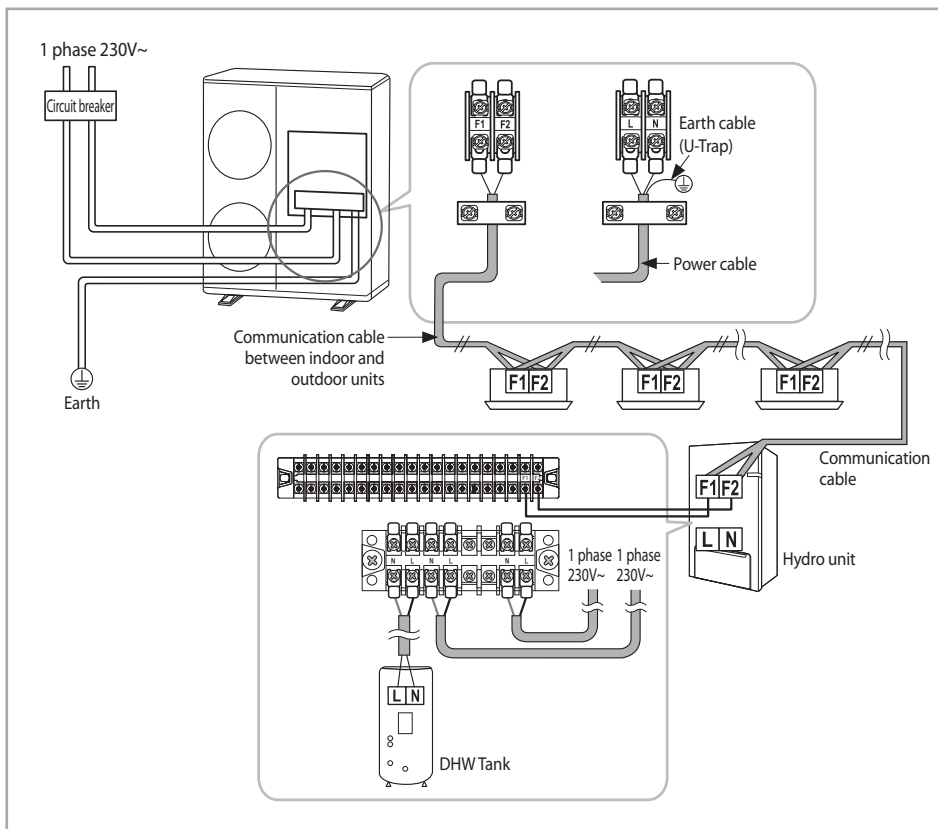

Water circuit connection

1. Connect the water inlet and water outlet.
2. Connect the hot and cold water supply tubes.
3. Connect the pressure relief valve (field supply, opening pressure maximum 10 bar) and drain.

Note It is important that the 3-way valve is fitted correctly:
 When the 3-way valve is idle (not activated) the space heating circuit should be selected,
 when the 3-way valve is activated the sanitary heating circuit should be selected.



Troubleshooting

IMPORTANT: All maintenance or repair work must be executed by an approved installer.

Problem	Possible cause	Solution
Hot water is not coming out.	No power supply to the water heater	Check if there is any power on the power supply terminal on the thermostat.
	The thermostat may be set too high and cause the fuse or safety cut-off to operate.	Reduce thermostat setting by 5°C and press the reset button.
Heating is not working	Heating element or internal electrical wiring is out of order.	Check if there is any power on the power supply on the connector of the heating element between black and yellow/green wires. If this is OK, press the reset button on the fuse/safety cut-off.
Water is not warm enough	Thermostat is set too low.	Adjust the thermostat up using a standard screwdriver.
	Heating element or the internal electrical wiring is partially out of order.	Check the resistance of the heating element on the connector of the heater bundle, and the condition of the internal wiring.
	UX mixing valve(fitted on top) is incorrectly adjusted.	Adjust the UX mixing valve correctly to the preferred temperature.
Safety valve(SV) is dripping.	Water expands when heated. If there is no consumption of hot water over a period of time pressure builds up, causing the safety valve to open.	If drip from the SV is severe, it might need to be replaced. Some dripping is normal. Alternatively an expansion vessel can be fitted.
Leak warning outlet is dripping.	The heating element may not be properly tightened.	Check the heating element o-ring seal and all connections.
	There may be a leak.	
Other problems, or if none of the above solves the problem.		Contact the installer/supplier regarding any other failure.



WARNING

Incorrect handling of thermostat, safety valve or other valves may lead to tank rupture. When servicing the unit follow instructions carefully:

- ◆ Always turn off main power supply when water supply is being shut off.
- ◆ Test the free operation of the safety valve regularly by opening the valve ensuring the water flows freely.
- ◆ Electrical connection and all servicing of the electrical components should only be carried out by an authorized electrician.
- ◆ Fitting and all servicing of plumbing fixtures should only be carried out by an authorized installer.
- ◆ When replacing the thermostat, safety valve or any other valve or part supplied with this unit, use only approved parts of the same specification.



CAUTION

- ◆ Before resetting the safety cut-off or altering the thermostat setting, always remember to isolate the electrical supply to the unit. This must be done prior to removing the electrical box lid.
- ◆ If the electric element or thermostat is defective, contact authorized electrician.
- ◆ After adjustments are completed, ensure the lid to the electrical box is refitted correctly and that the retaining screw is properly fitted.



